Ergo-Series E6 Barrel Sauna


59D" x 81H"




Note: Please read manual before construction

Rev 4/2023


Front & Back Walls

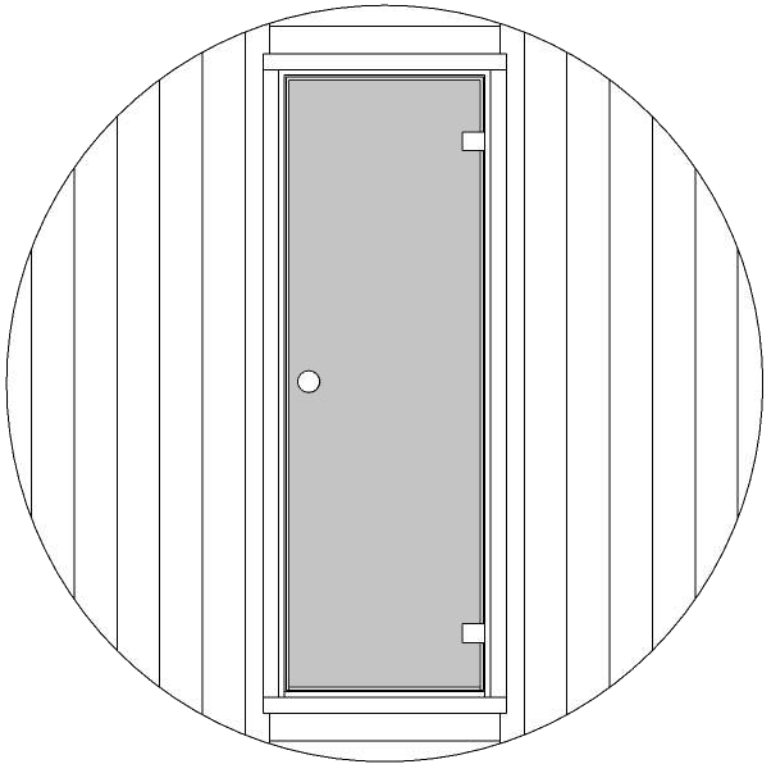

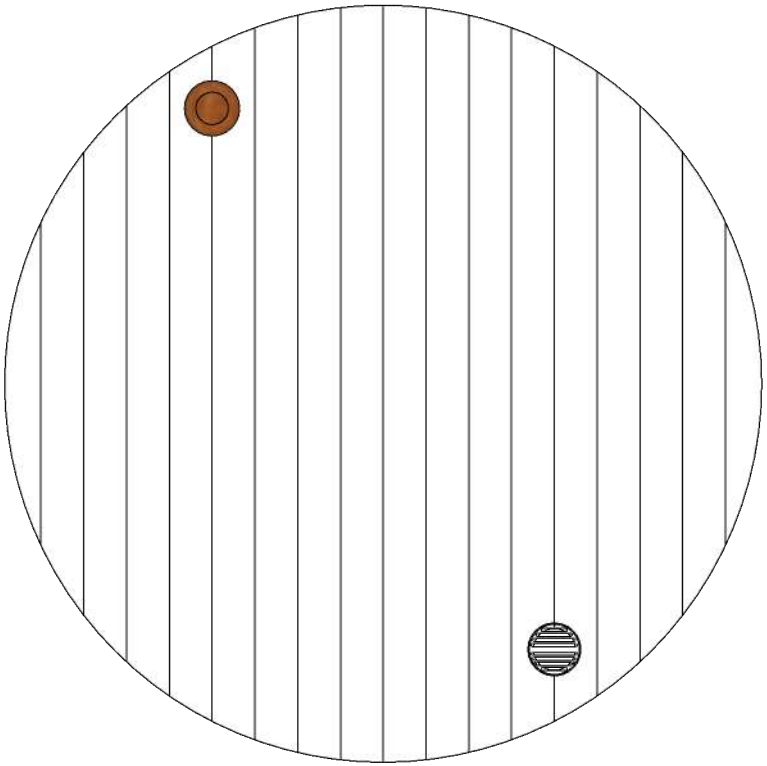


E6 Barrel Sauna 59D" x 81H"


Details list.

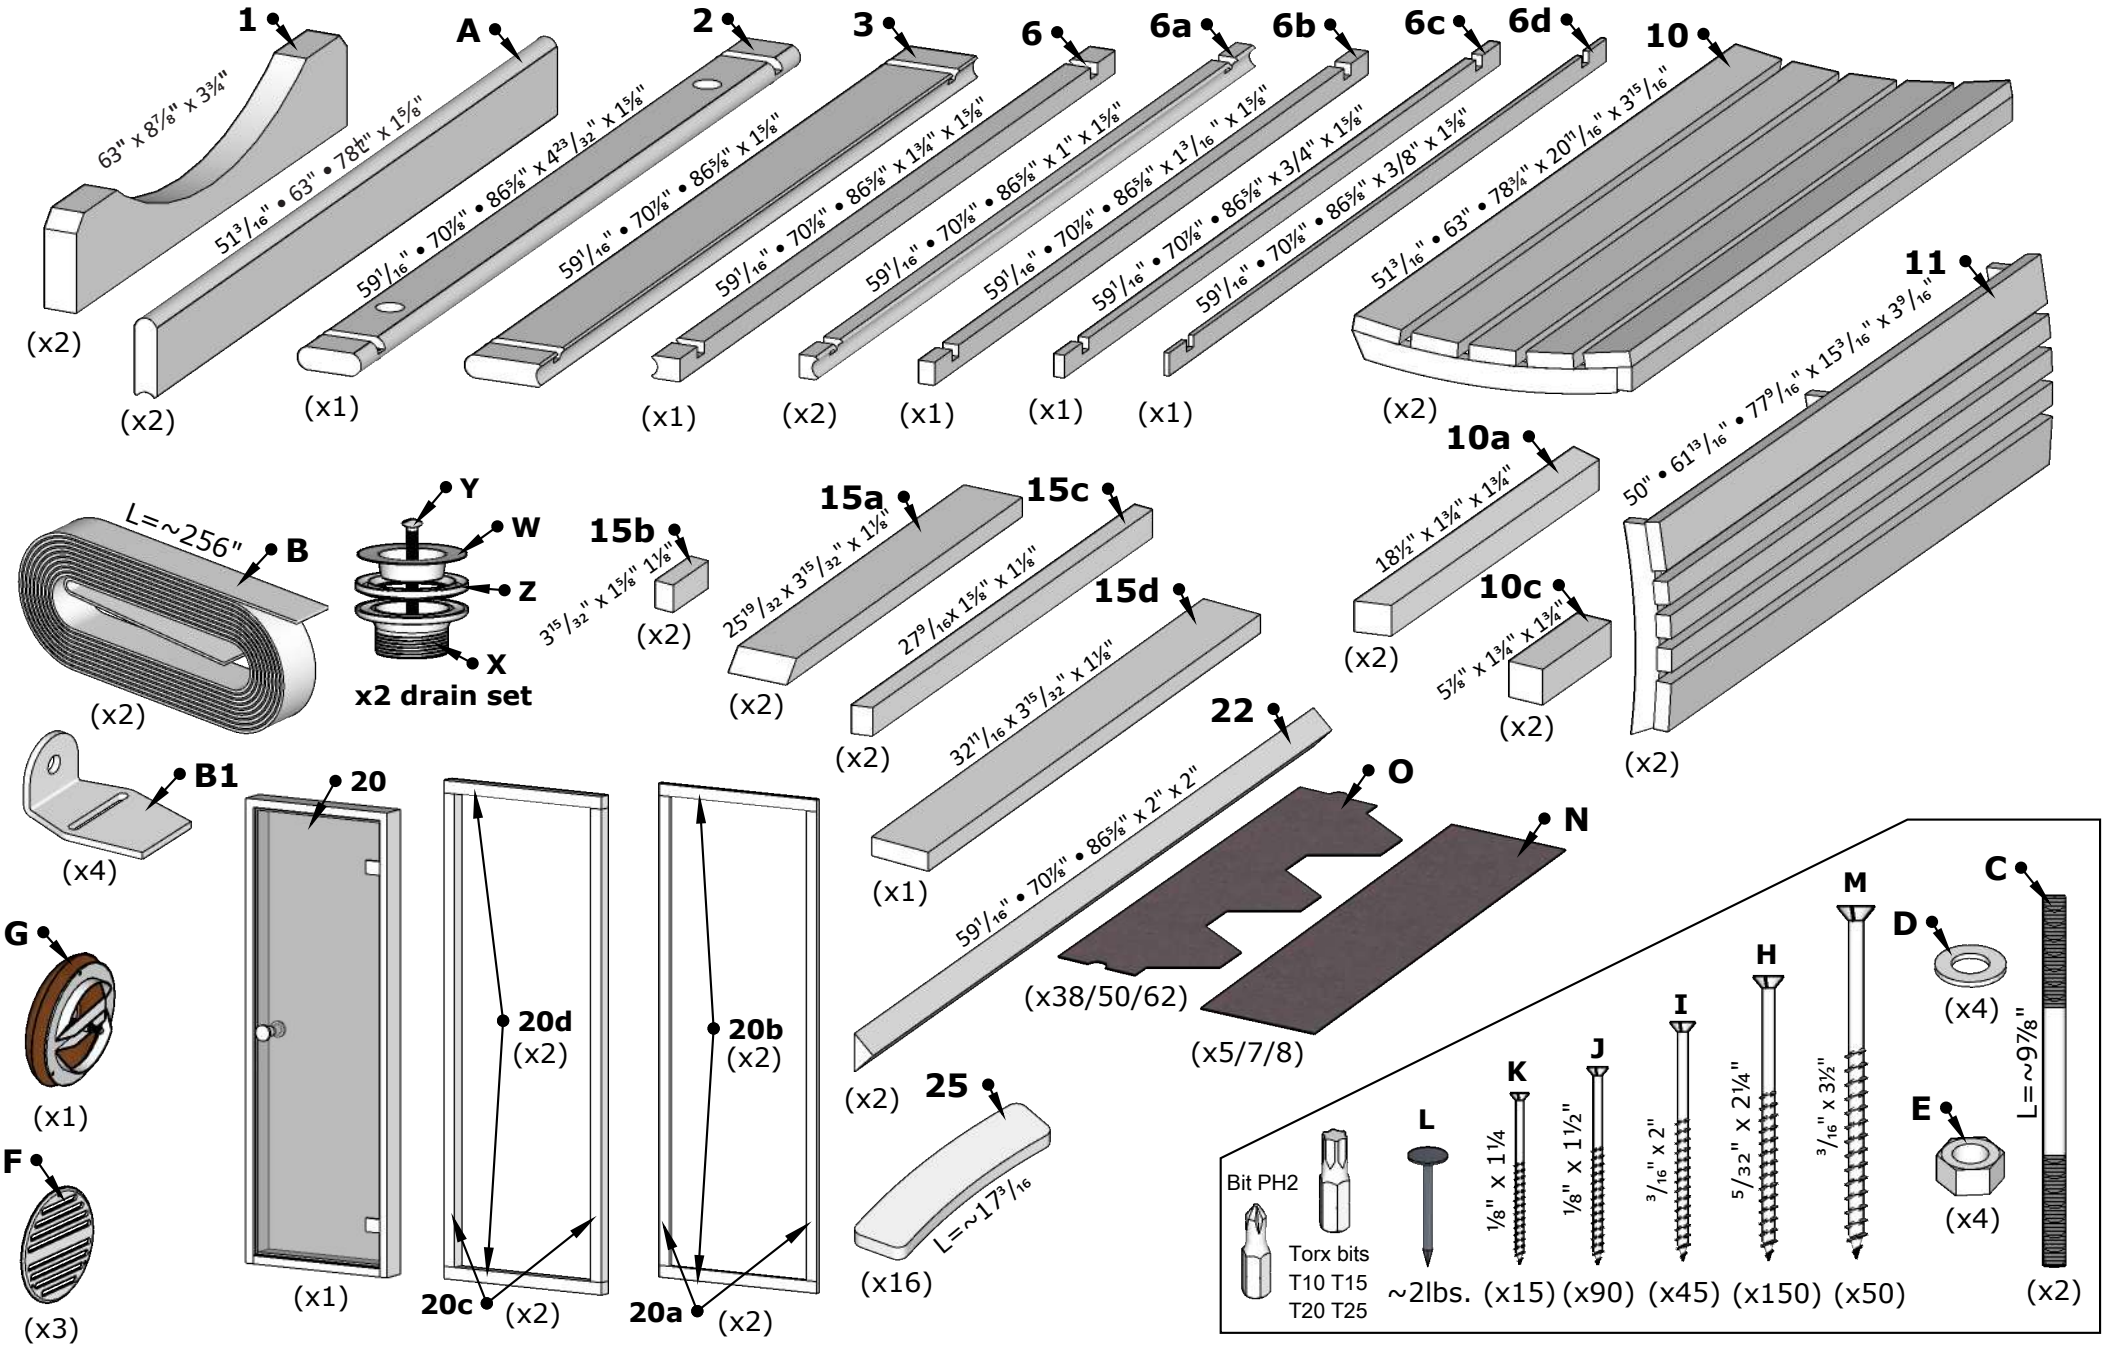


Tools needed

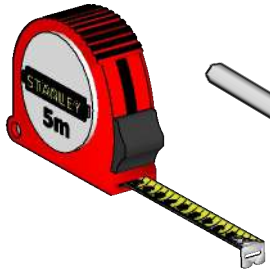


Measuring tape

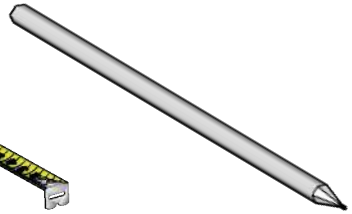


Marker pen

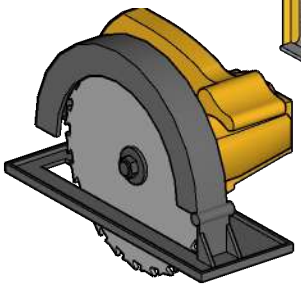

Circular saw

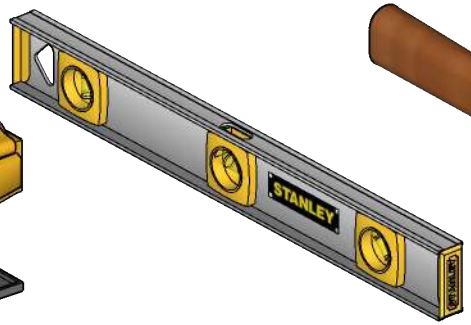

Water level

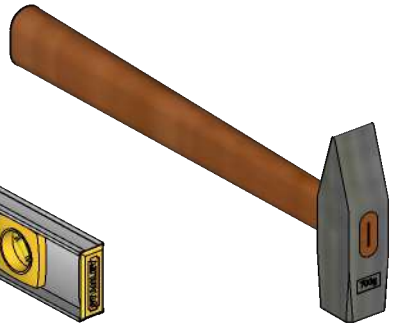


Hammer




Extra hands




Ratchet strap

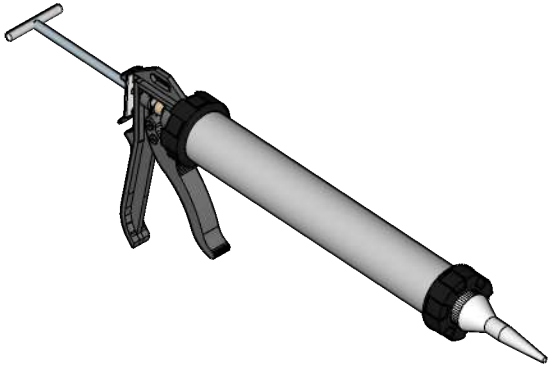

Silicone gun
(Only glass-wall models)

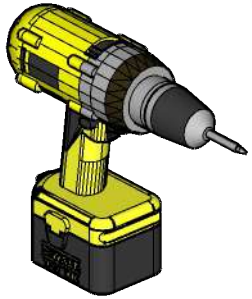


Drill

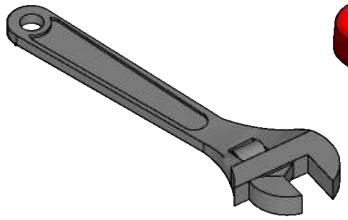

Cresent wrench





Utility knife

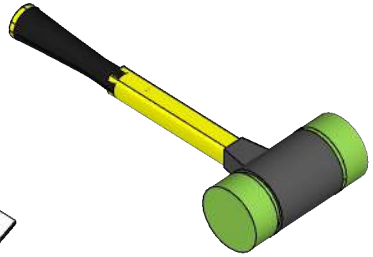


Rubber mallet

Wooden front wall installation

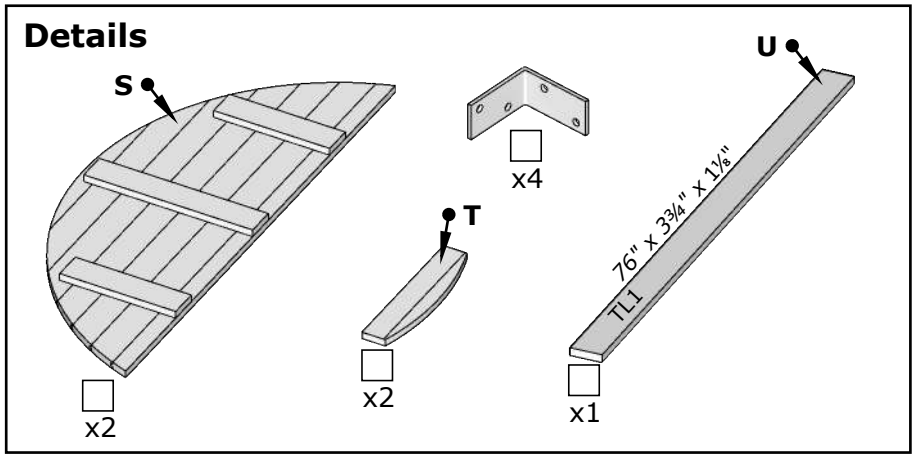

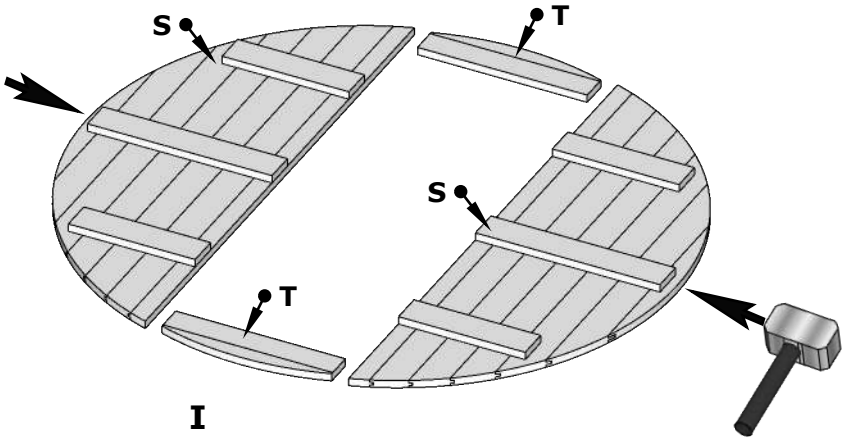


I

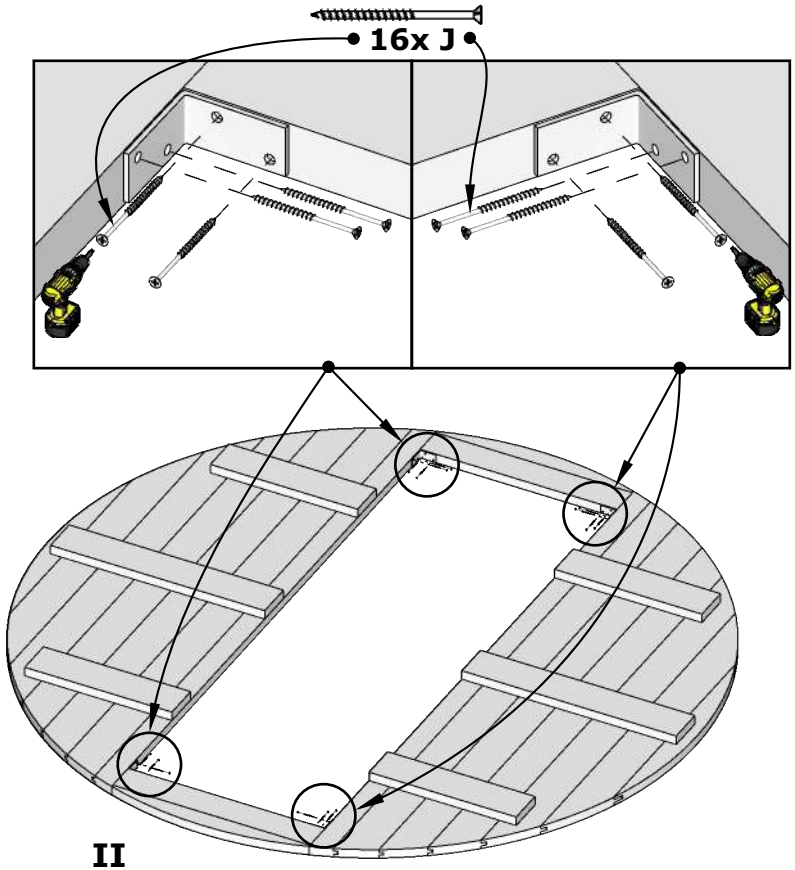


II


DET U Fix it diagonally to make wall more rigid during the installation.

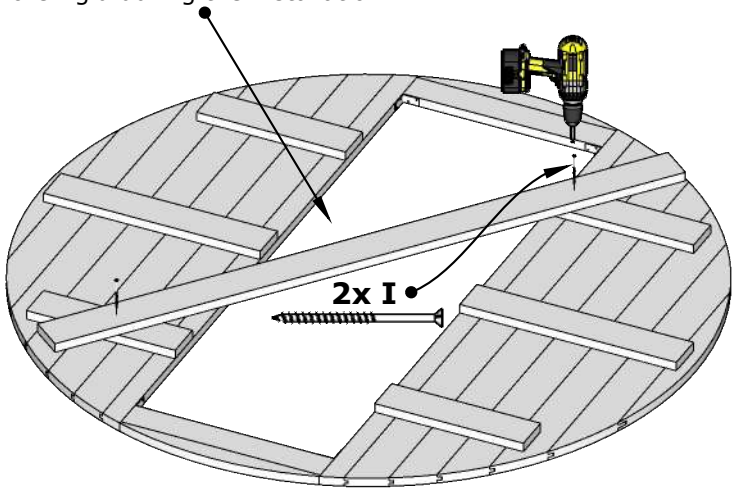


III


Wooden back wall installation

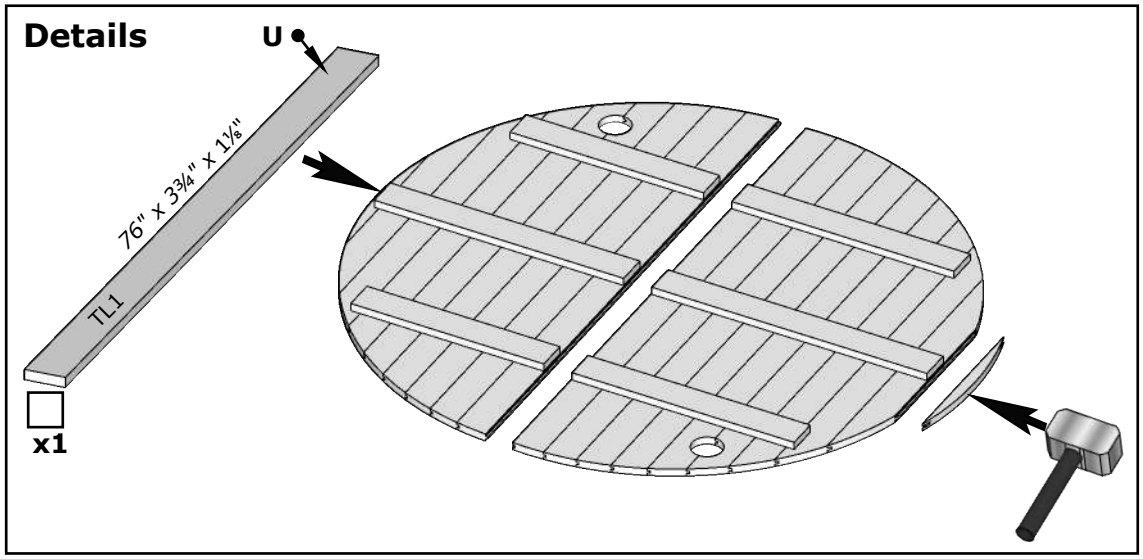


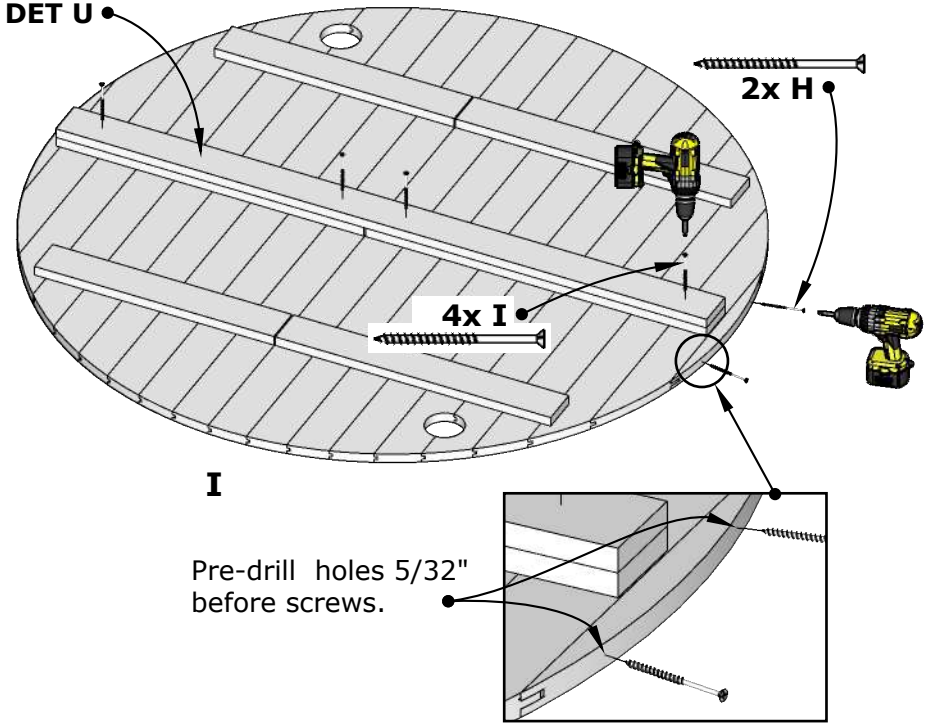

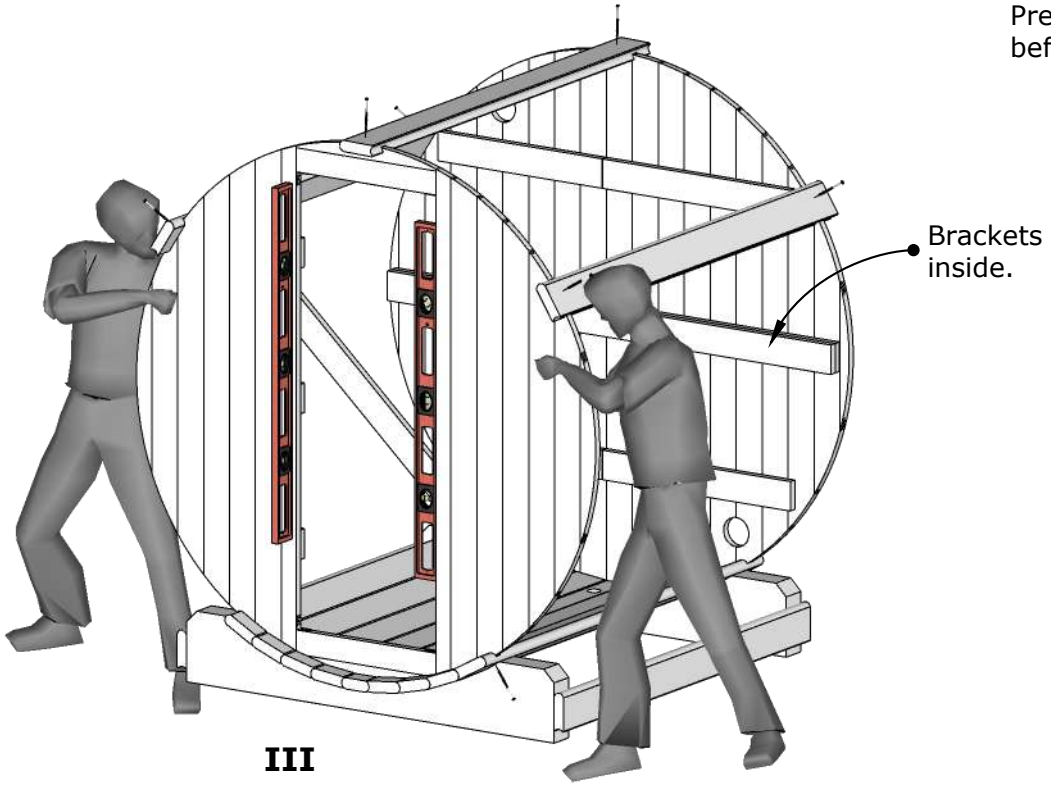


E6 Barrel Sauna 59D" x 81H"

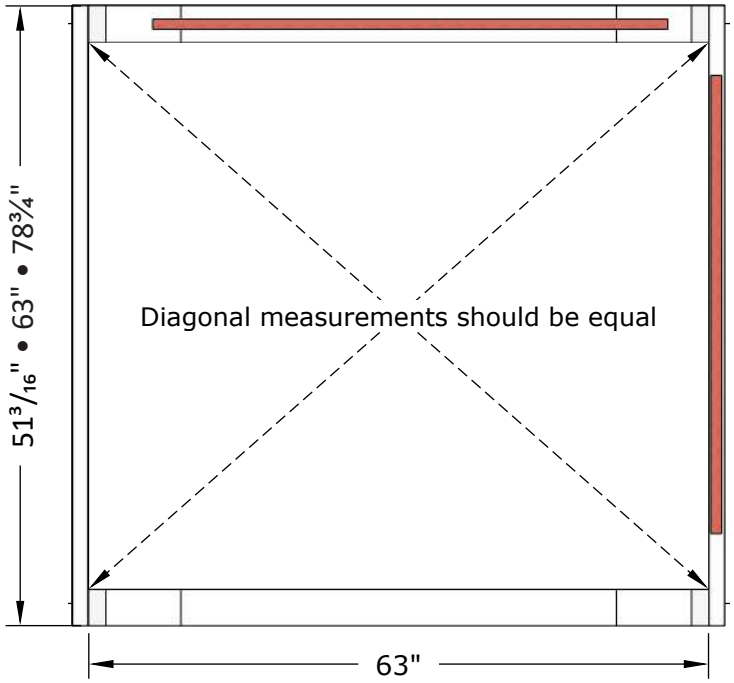

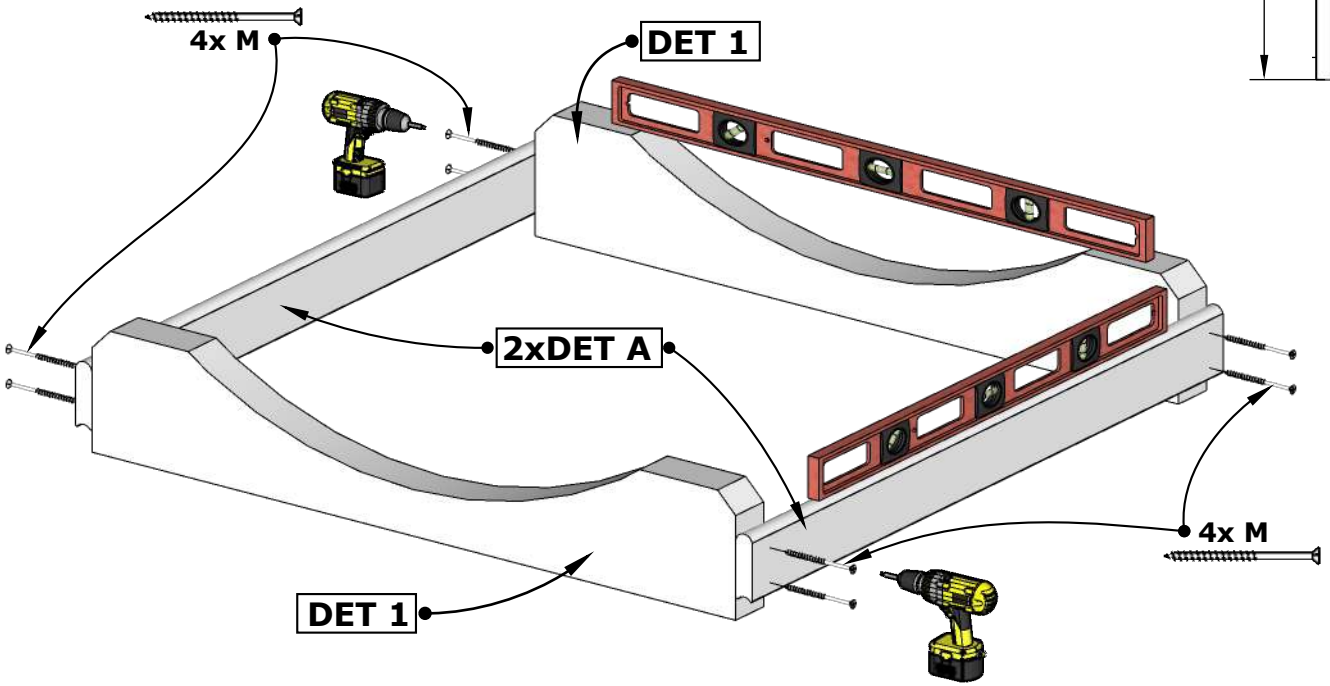


1.

E6 Barrel Sauna 59D" x 81H"

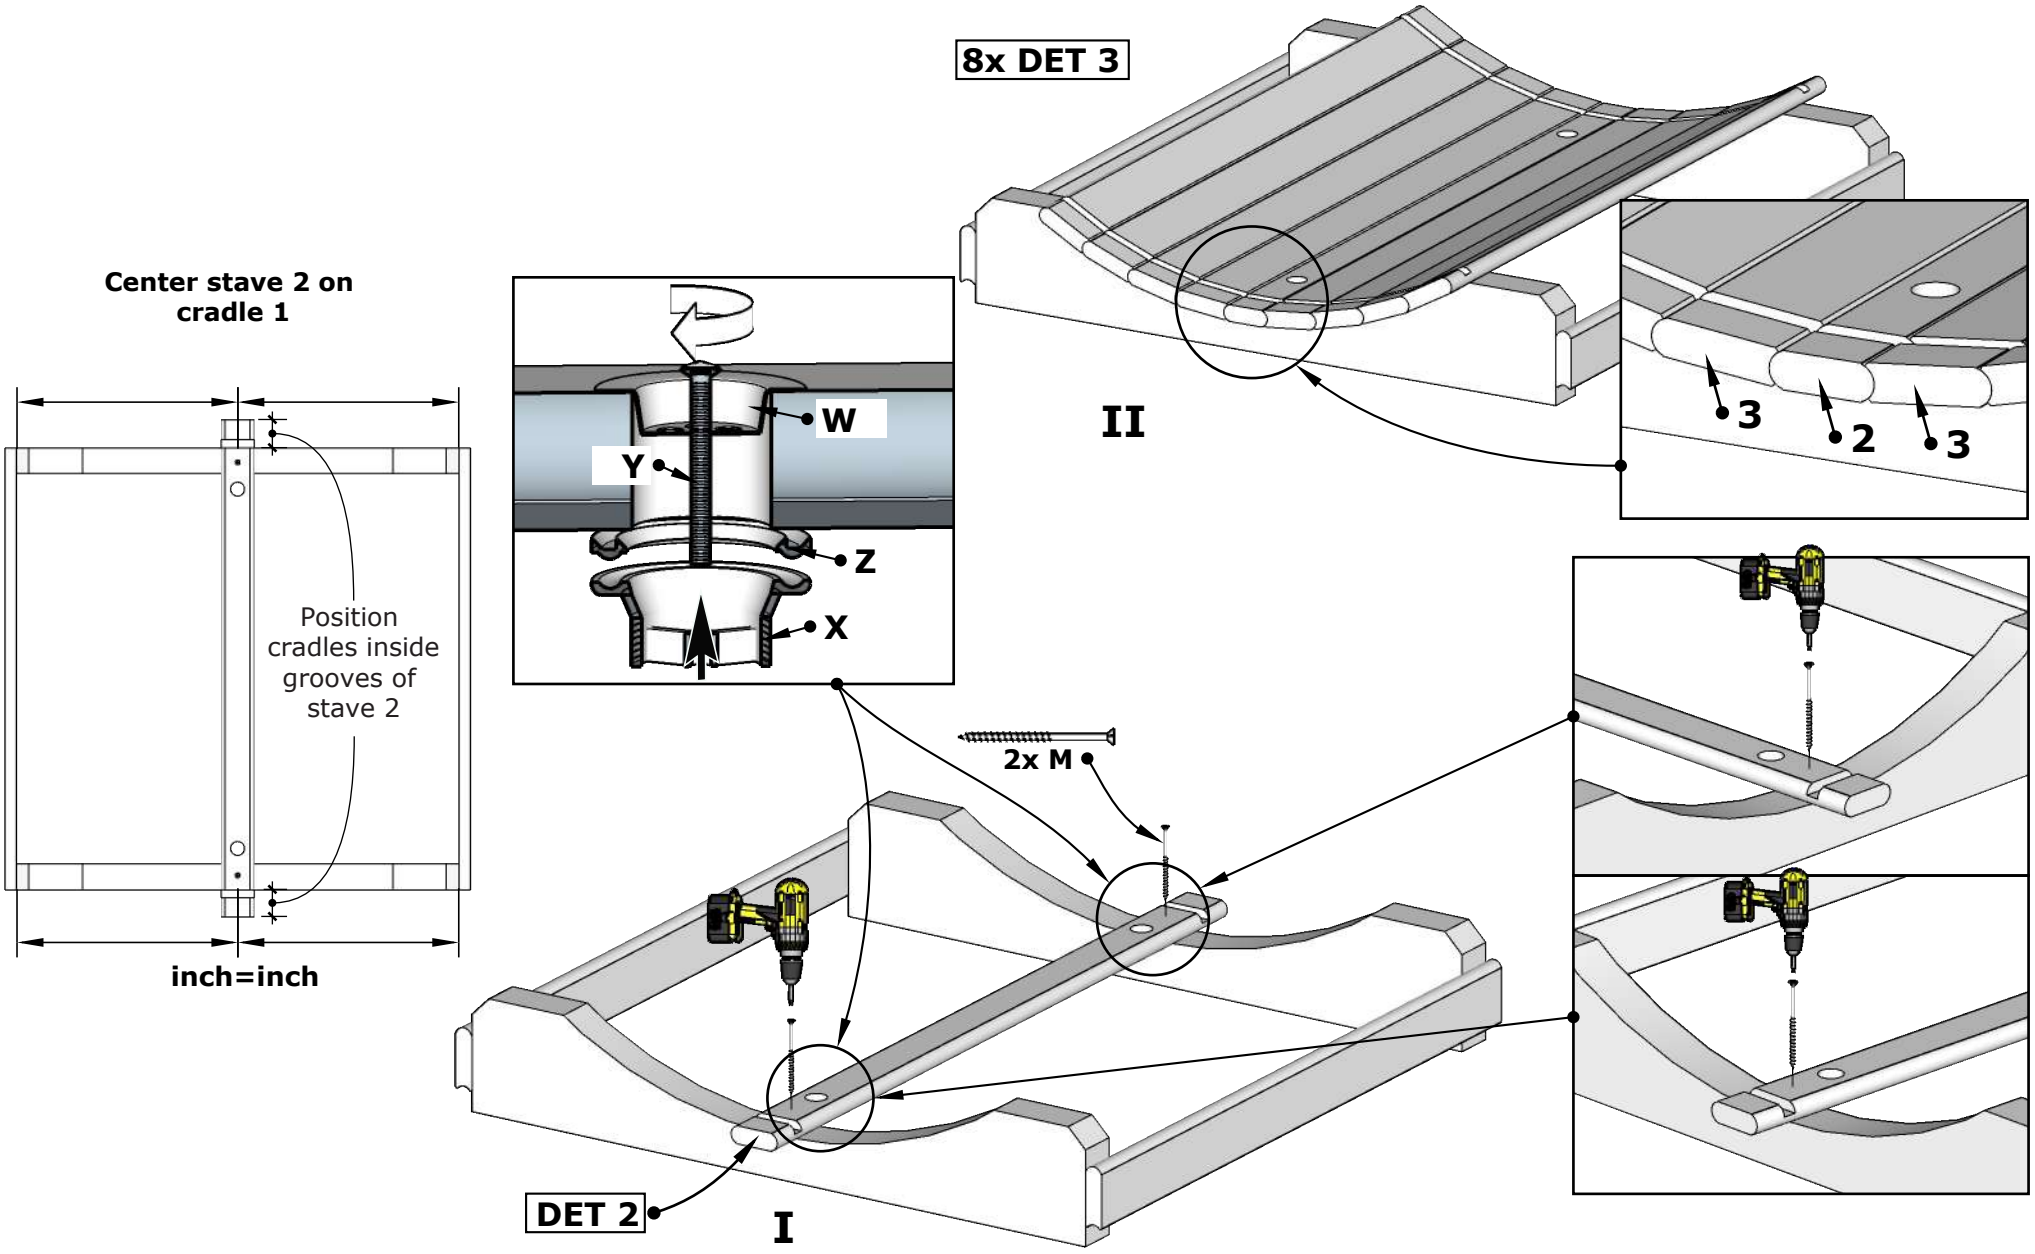


2.


E6 Barrel Sauna 59D" x 81H"

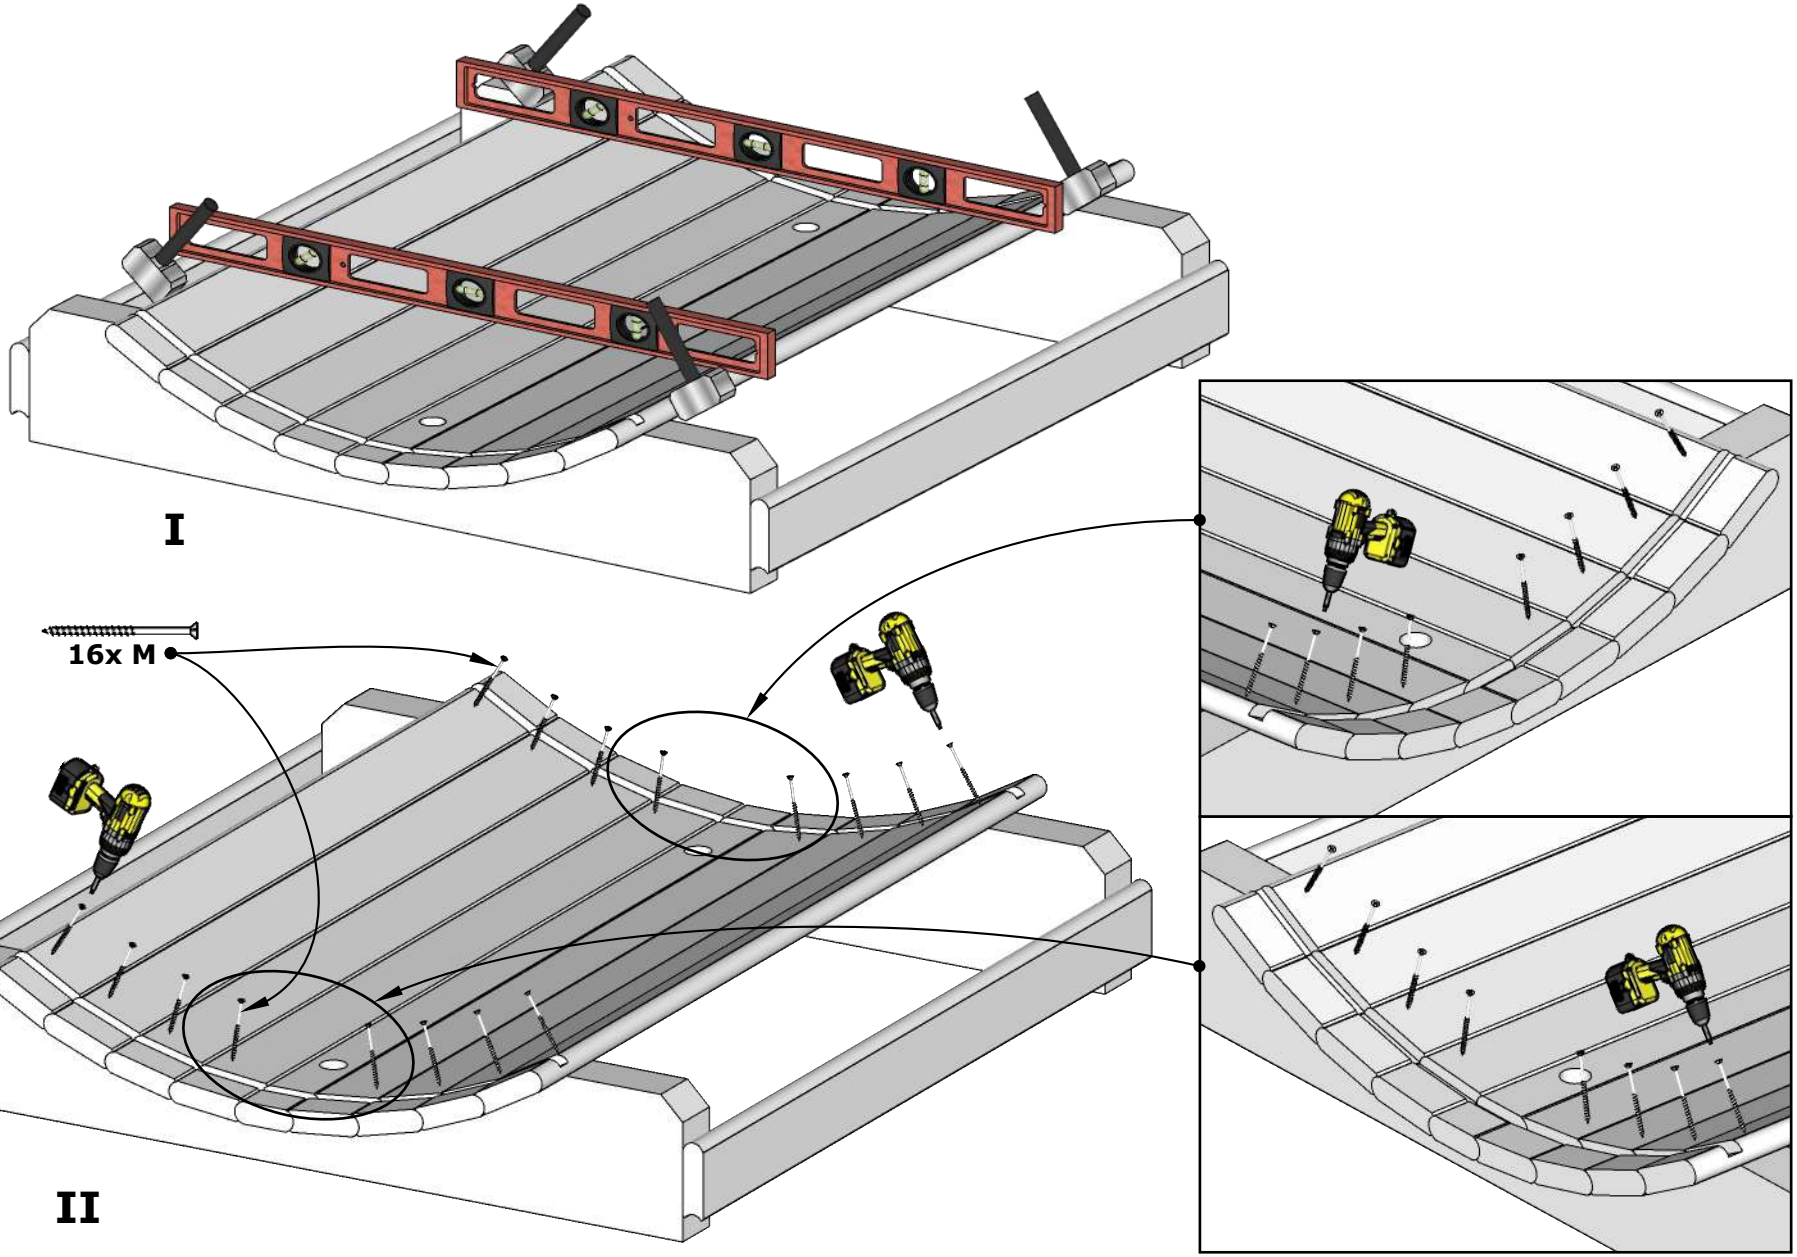


3.


E6 Barrel Sauna 59D" x 81H"

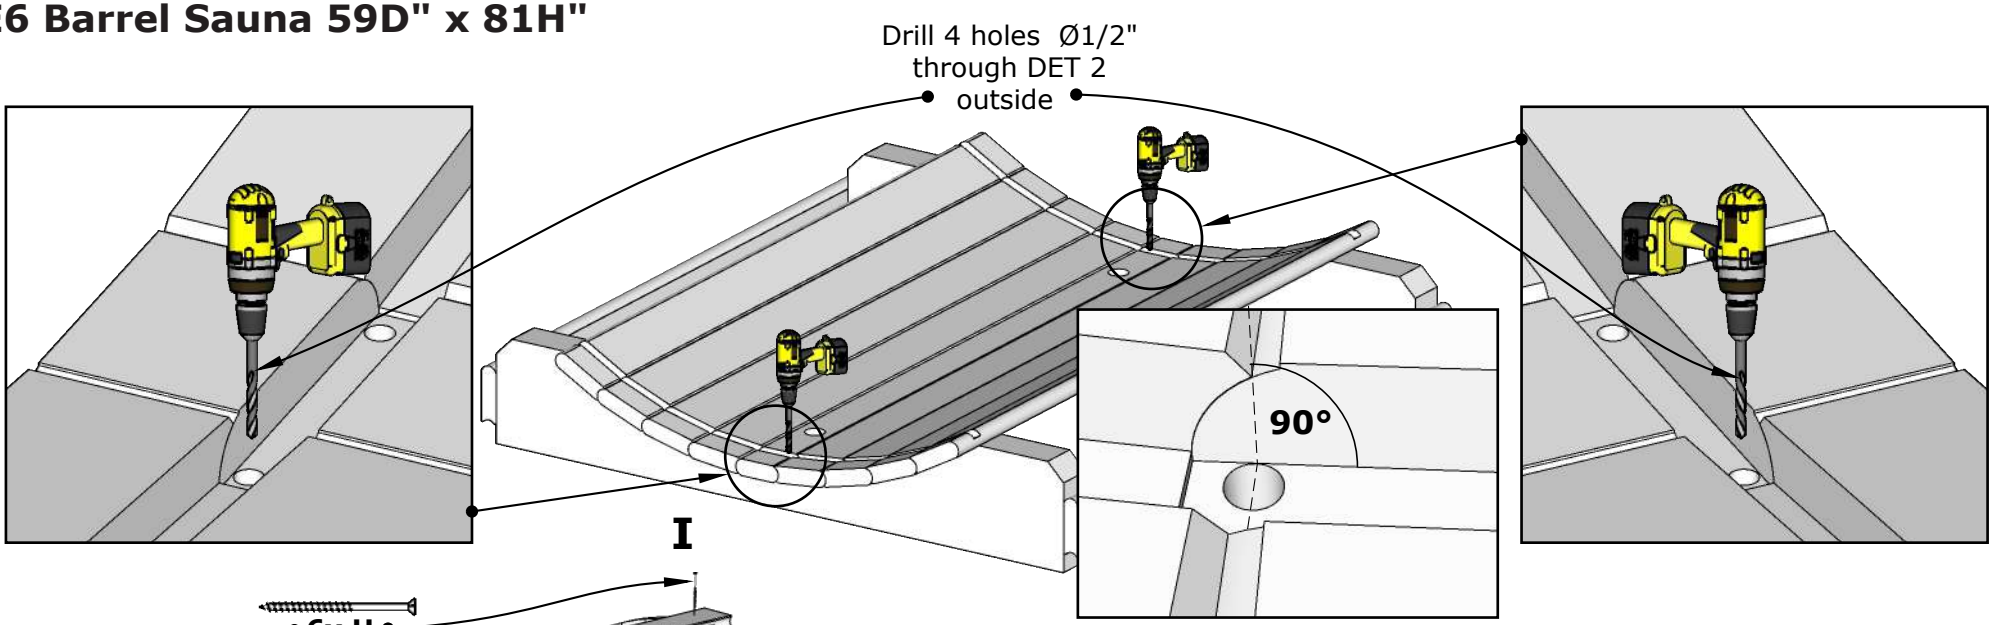

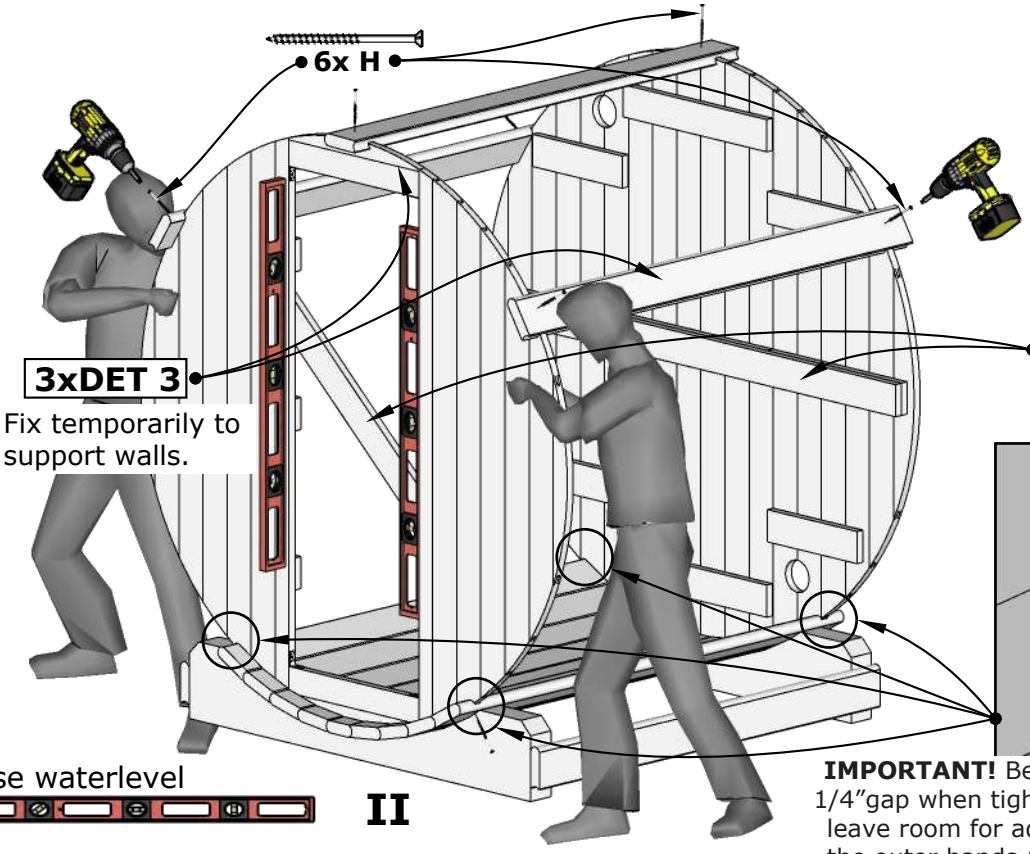


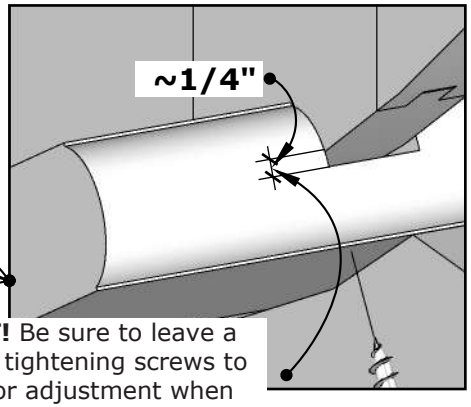


IMPORTANT! Be sure to leave a 1/4”gap when tightening screws to leave room for adjustment when the outer bands (B) are installed.

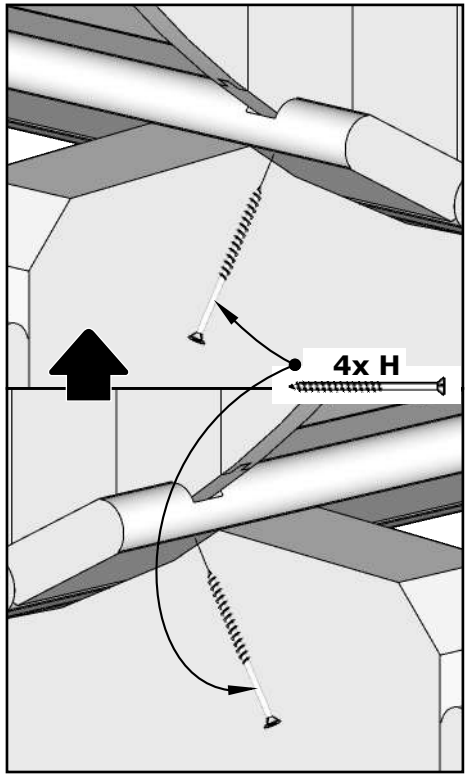


E6 Barrel Sauna 59D" x 81H"

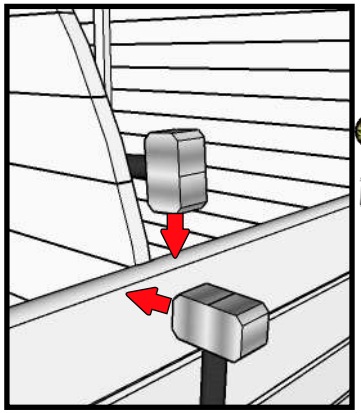


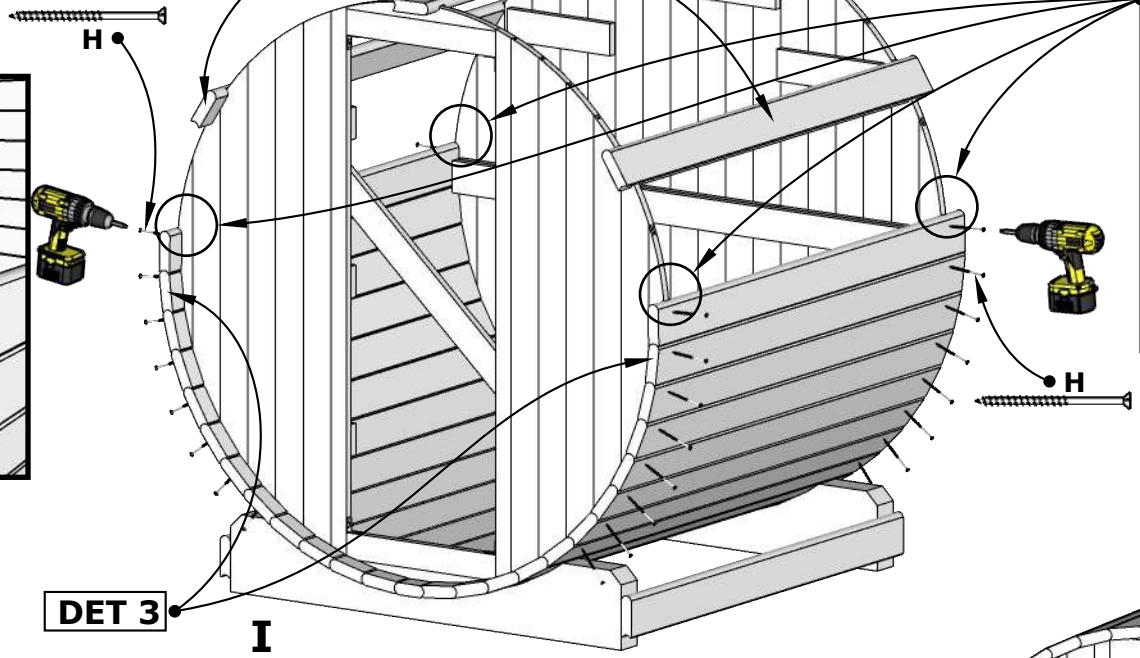

I

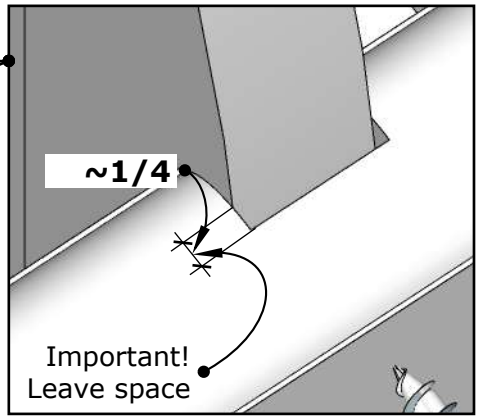



IMPORTANT! Be sure to leave a 1/4" gap when tightening screws to leave room for adjustment when the outer bands (B) are installed.

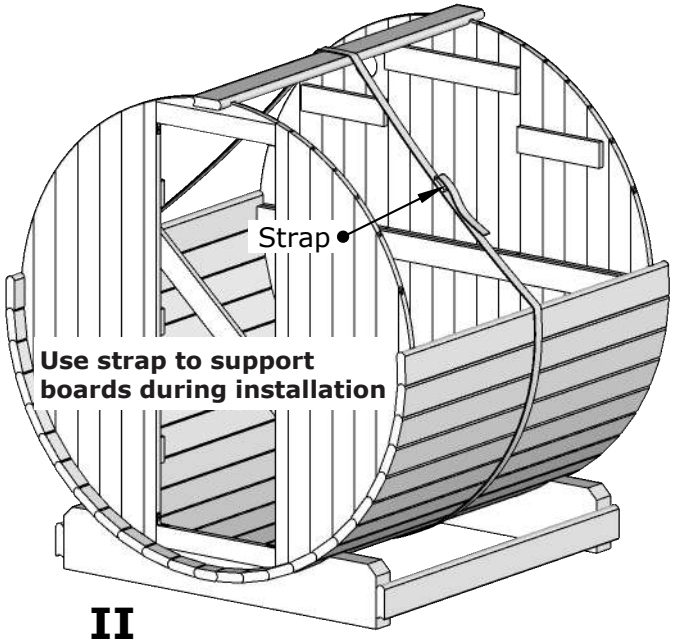

II


See the next page.

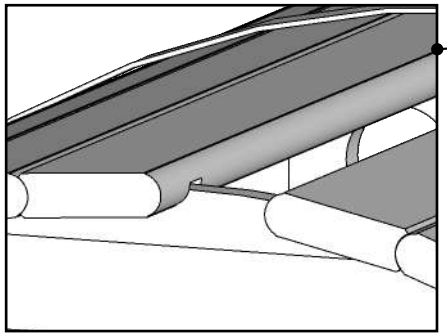

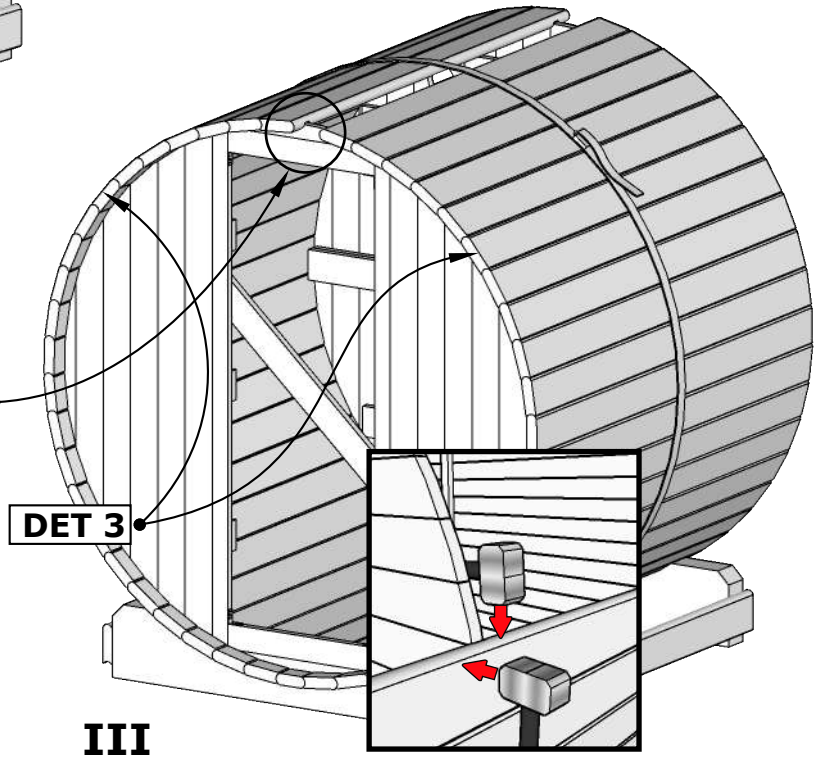


III


E6 Barrel Sauna 59D" x 81H"

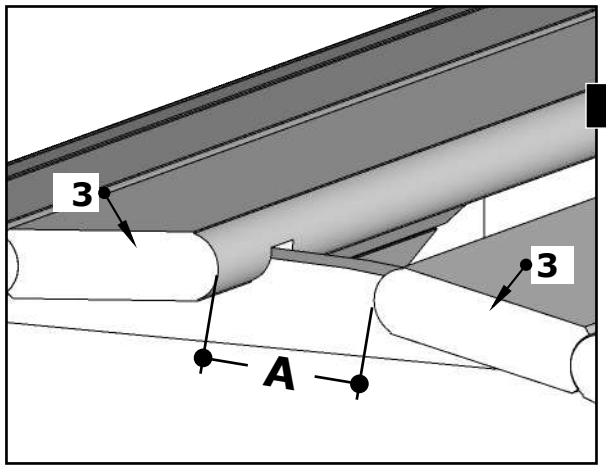


I

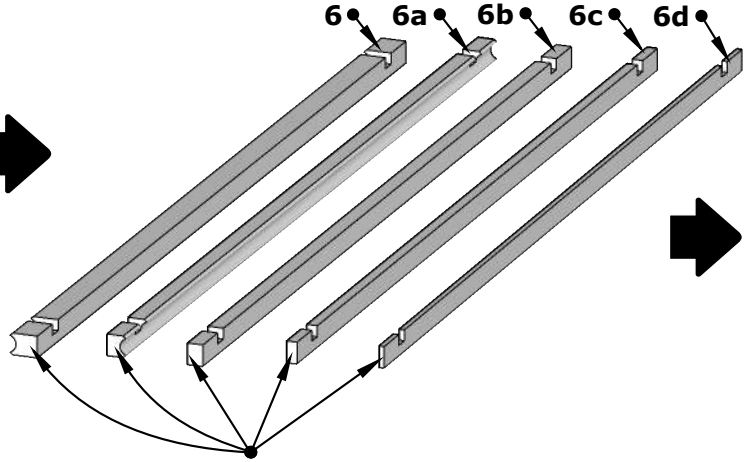


Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

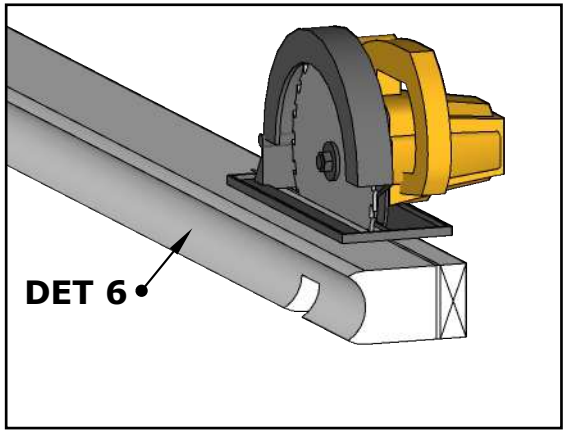

If needed, trim the flat edge of the board to create the desired width.

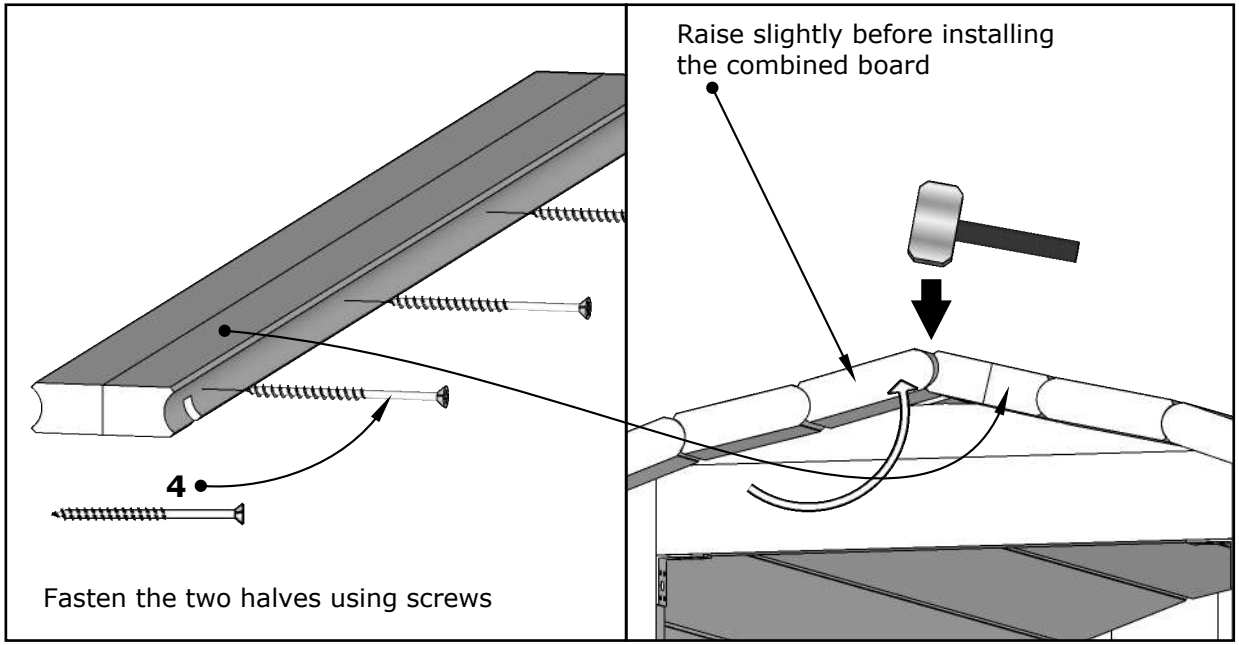



II

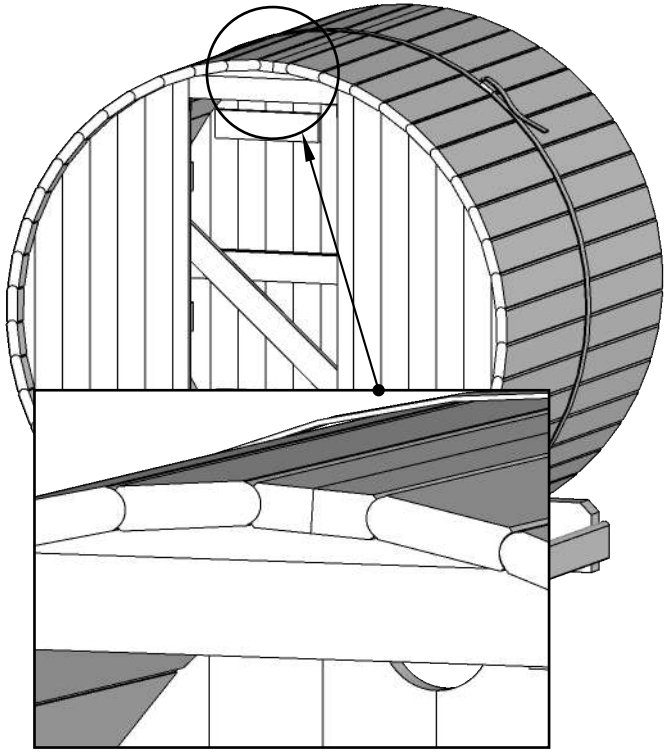



III

E6 Barrel Sauna 59D" x 81H"

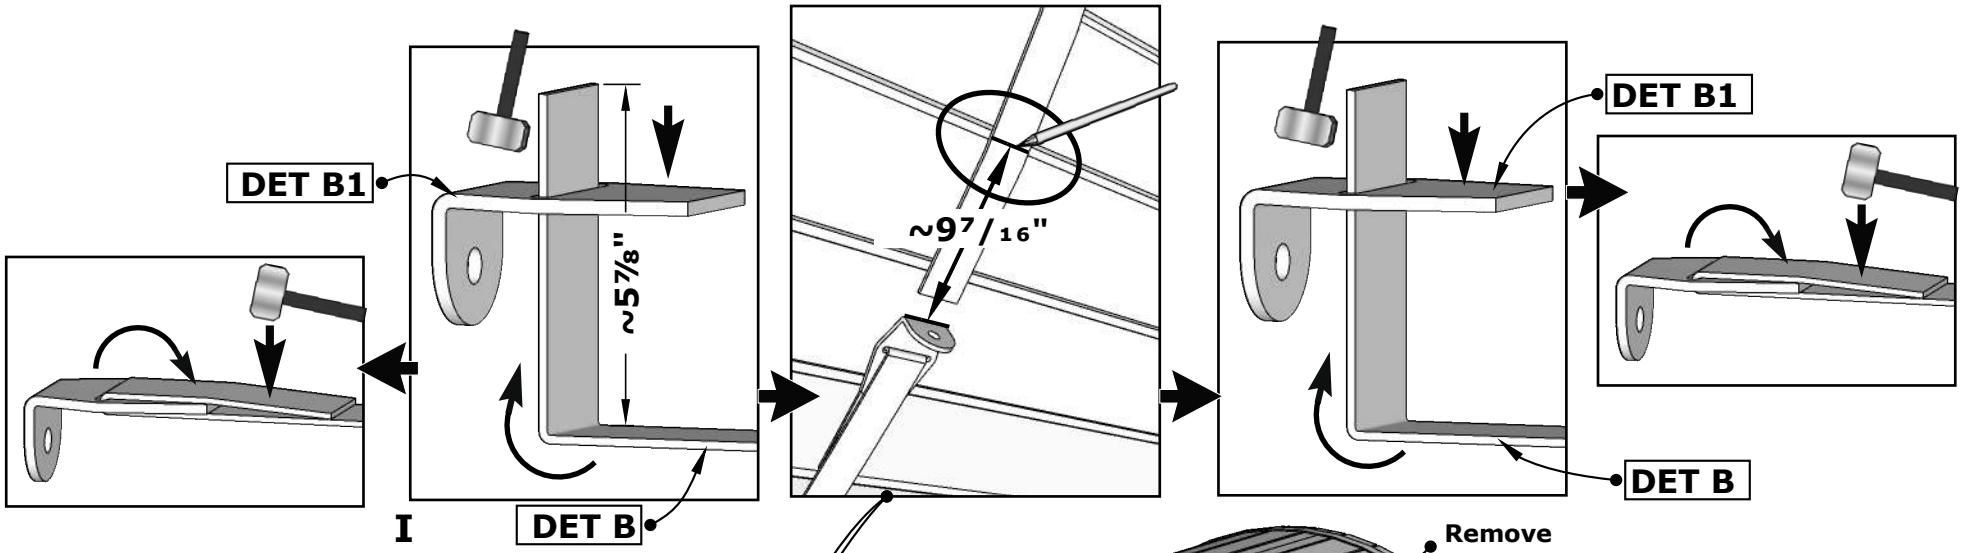

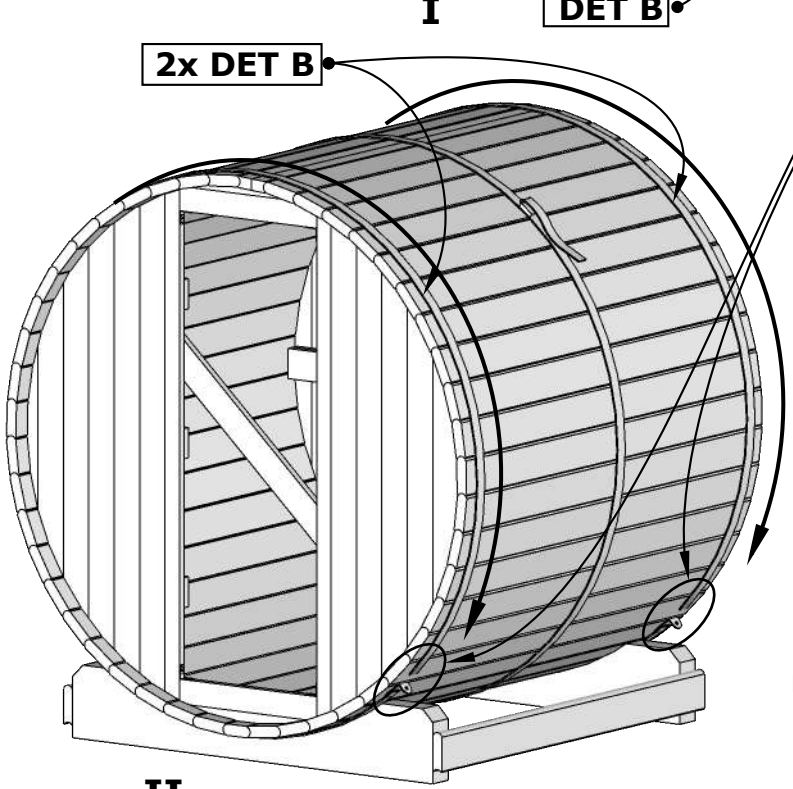

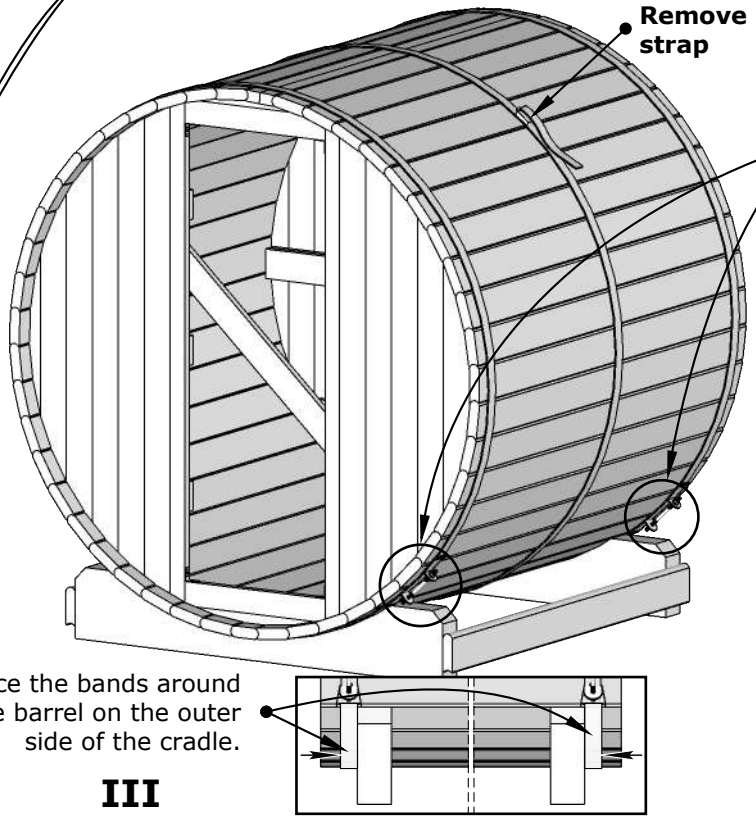


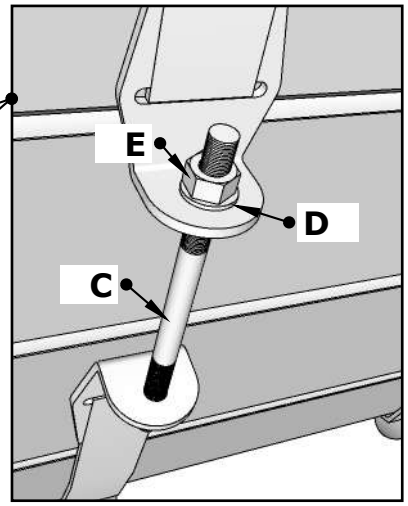




7.

E6 Barrel Sauna 59D" x 81H"

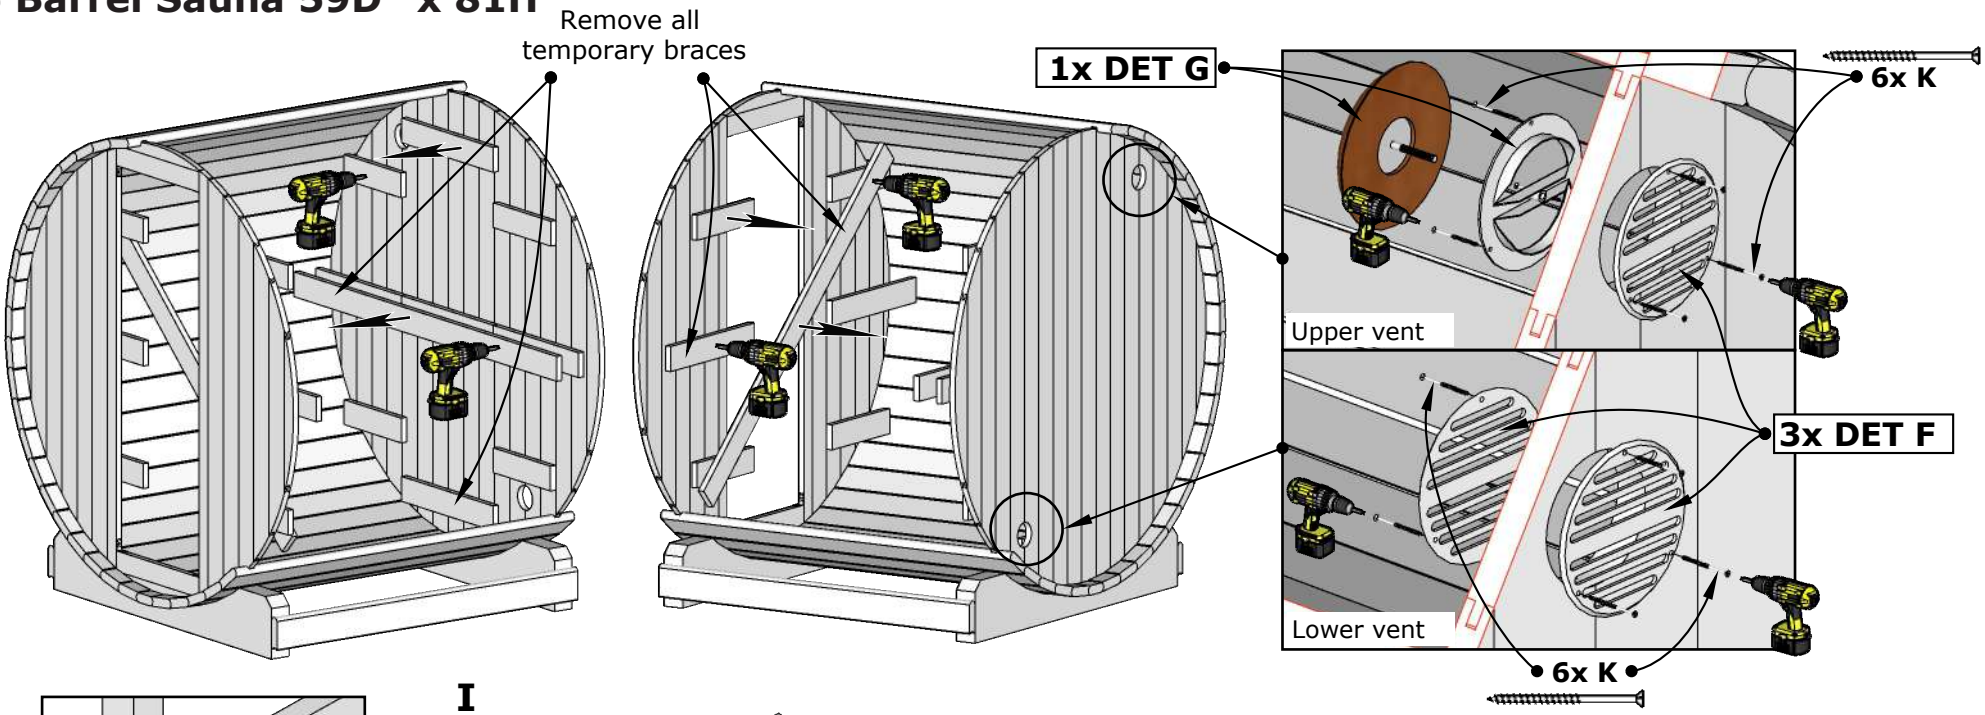

I

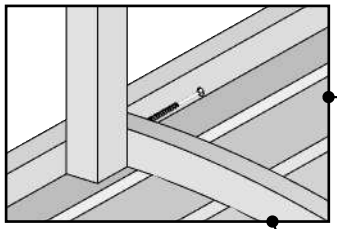

Pre-drill holes Ø5/32"
before screws.


72" and 88" Saunas
with front-glass wall
have 4 pc. of DET 10a.

II


NB! If Your sauna equipped with front-glass wall, see front-glass wall installation manual for proper benches installation.

III


E6 Barrel Sauna 59D" x 81H"

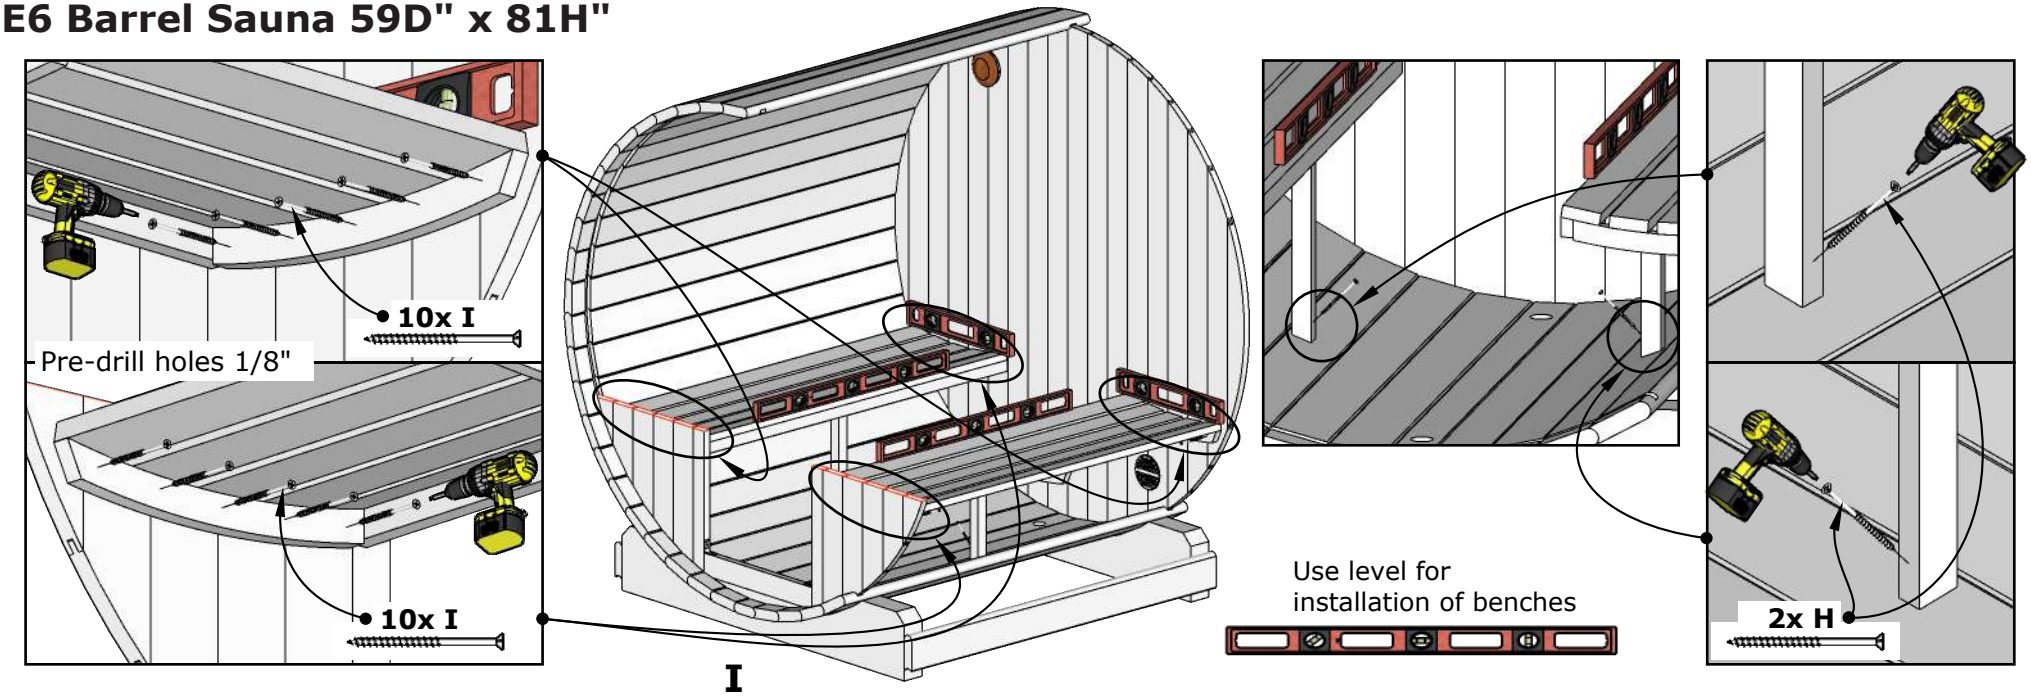


I

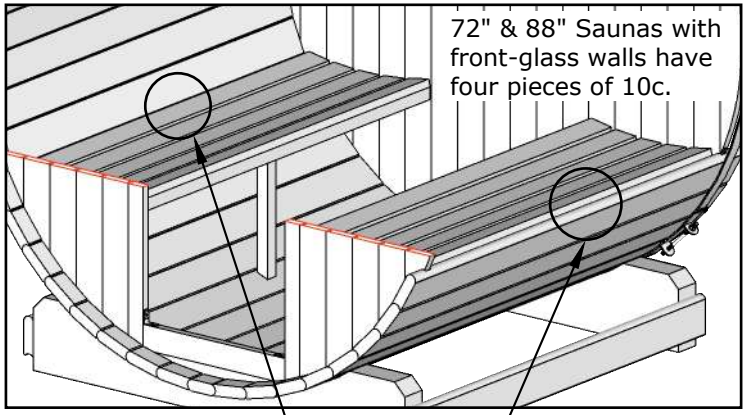

Under the benches

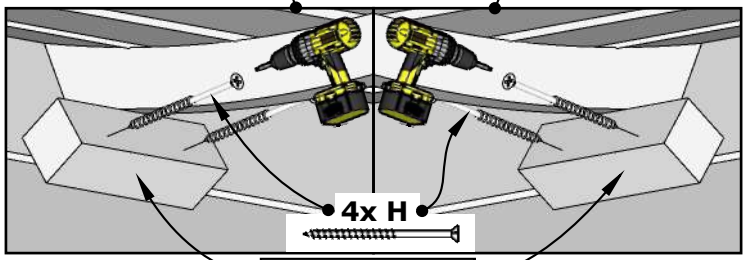


II

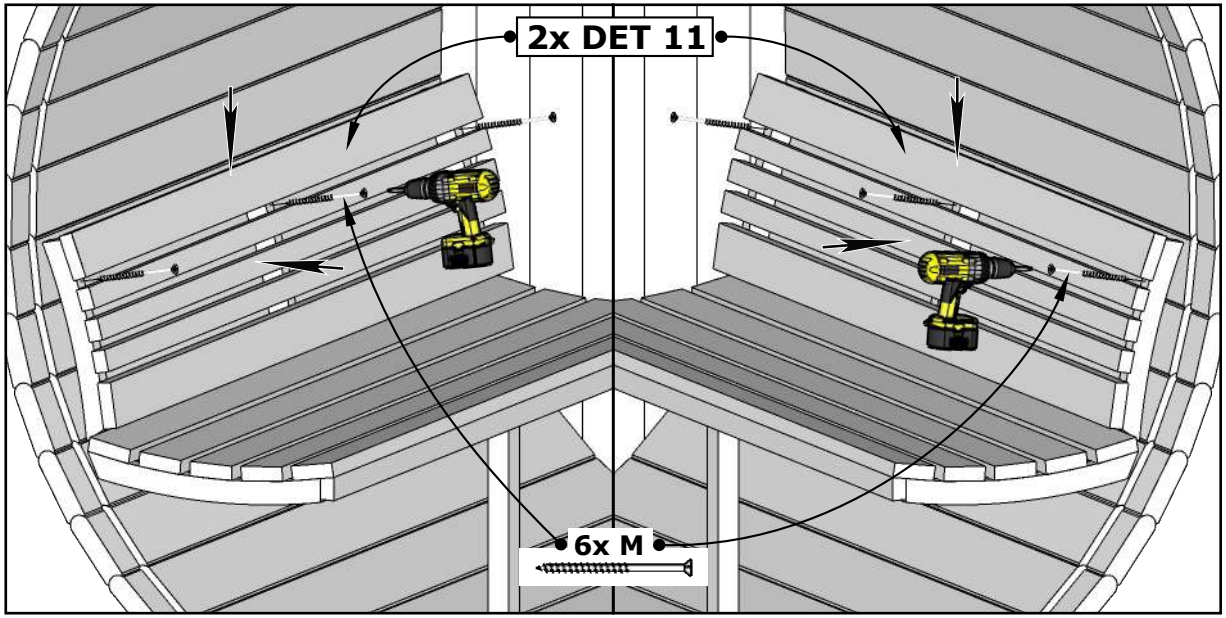



III


E6 Barrel Sauna 59D" x 81H"

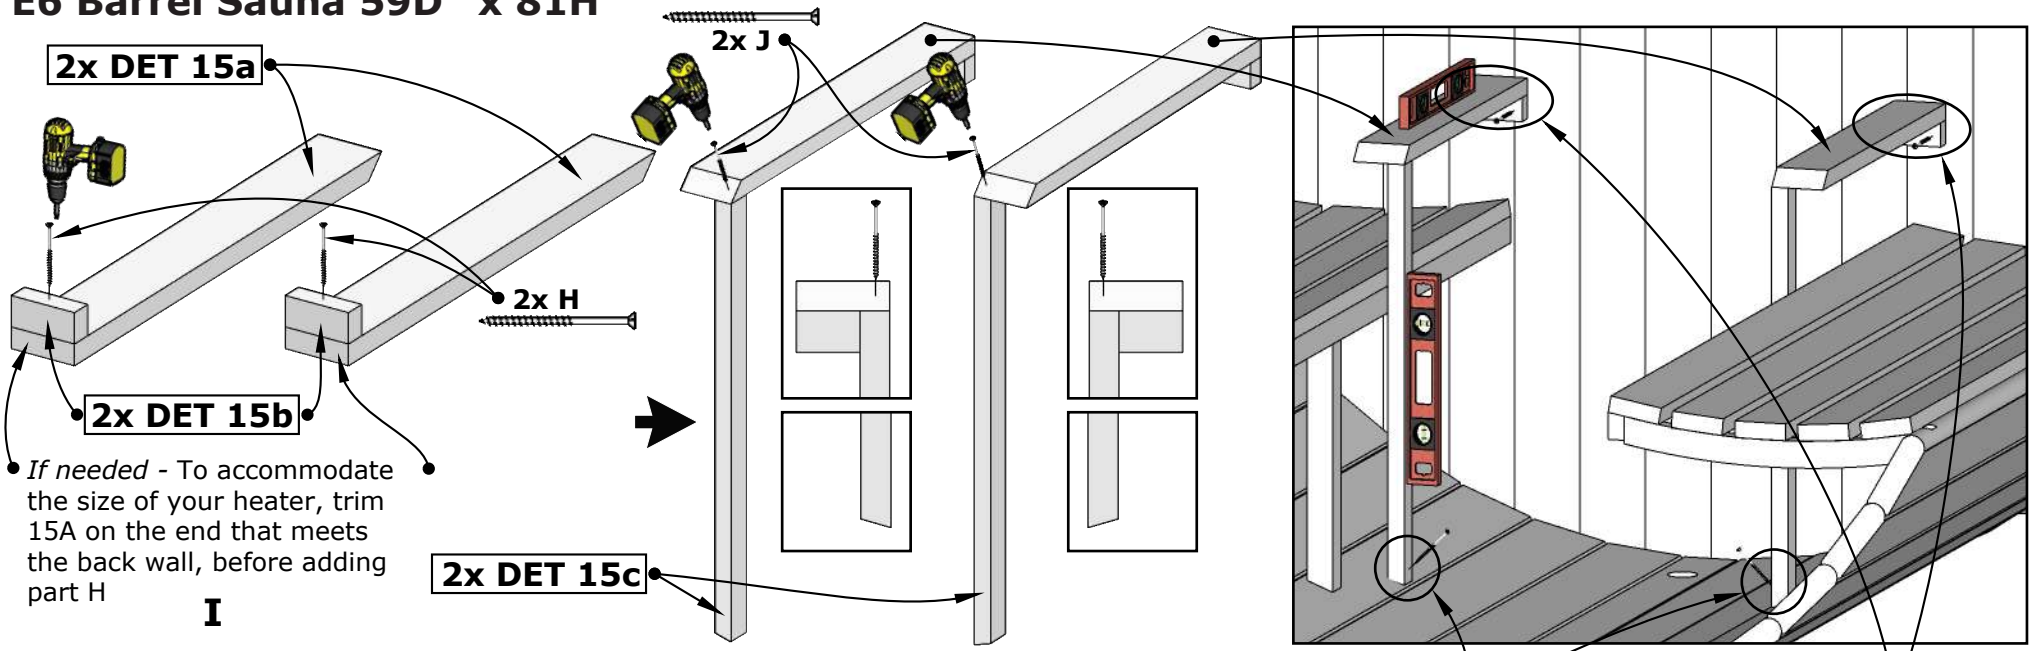

I

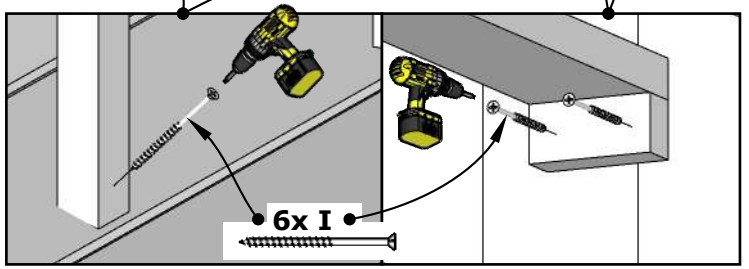


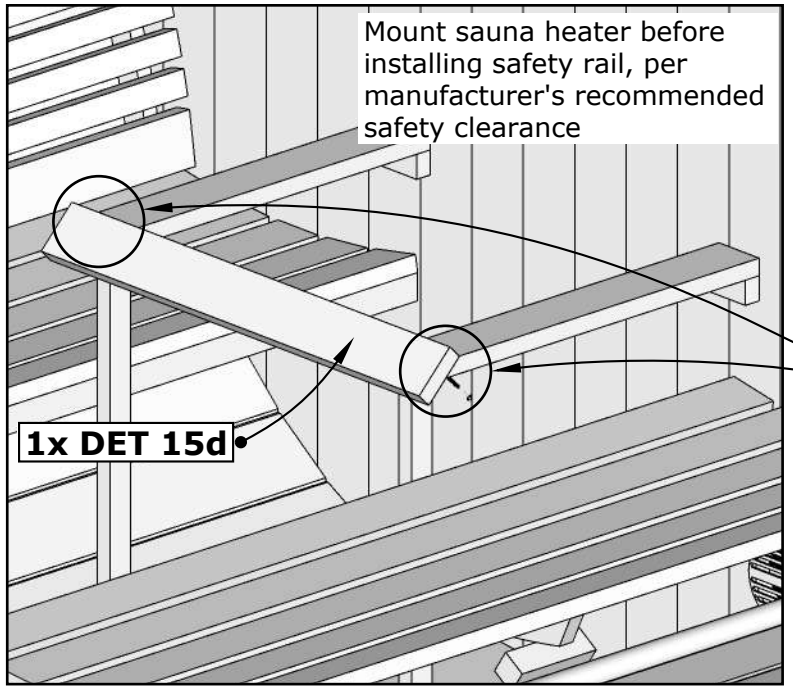


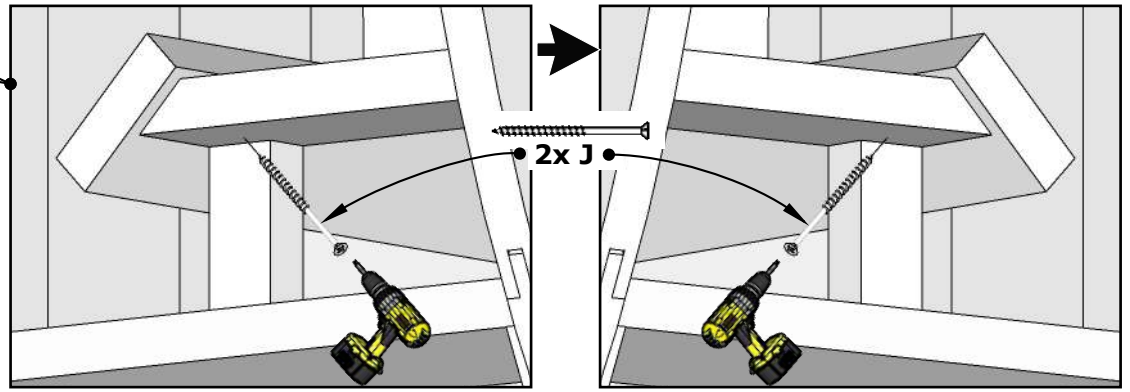



II

E6 Barrel Sauna 59D" x 81H"

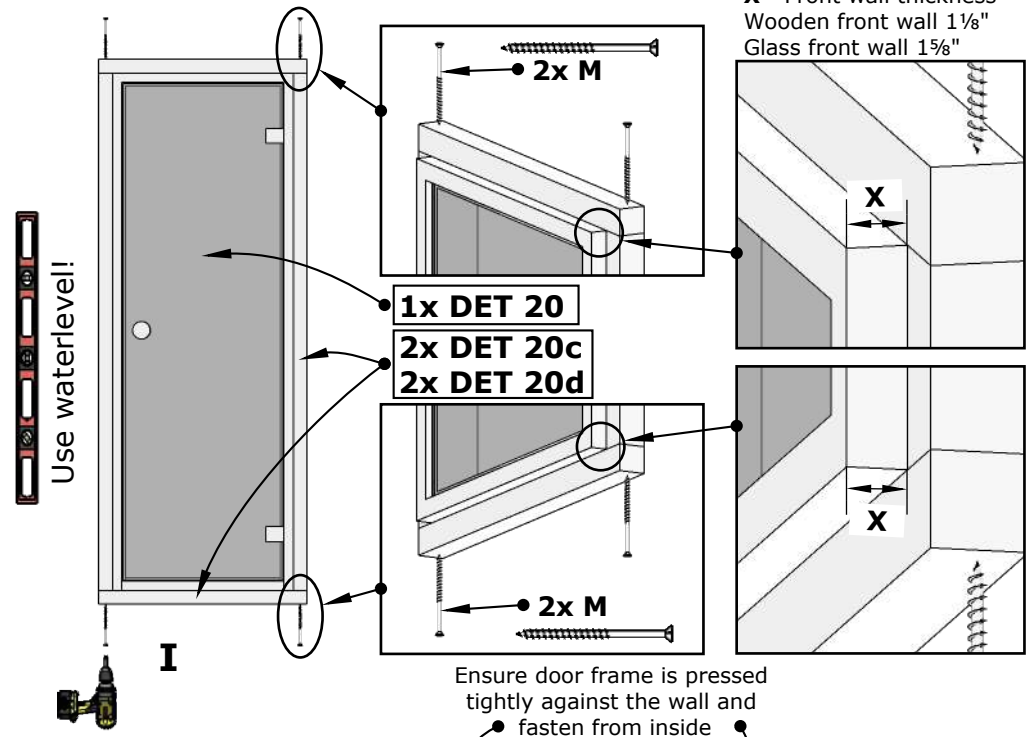

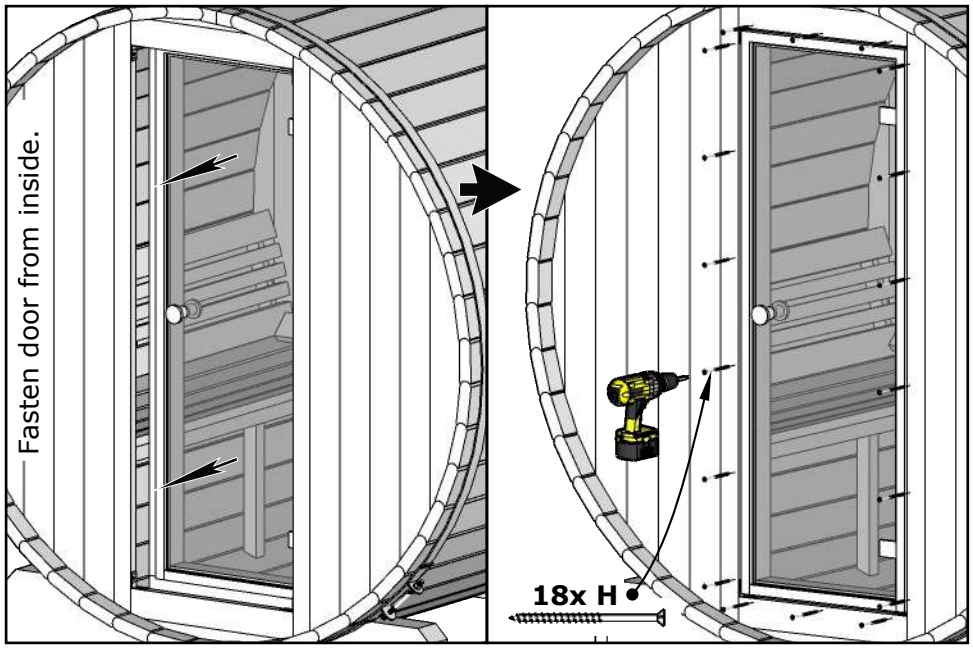

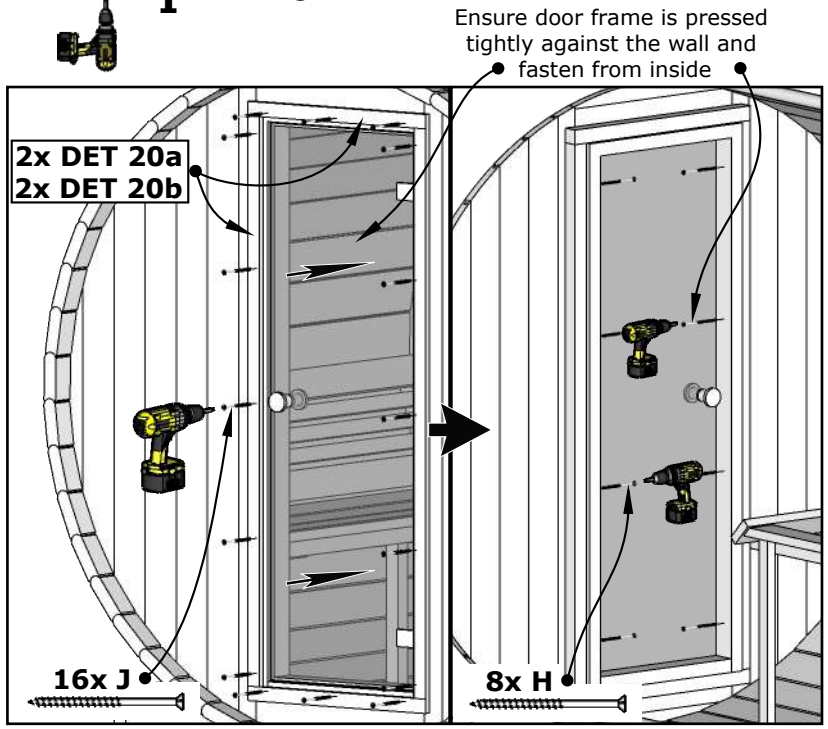


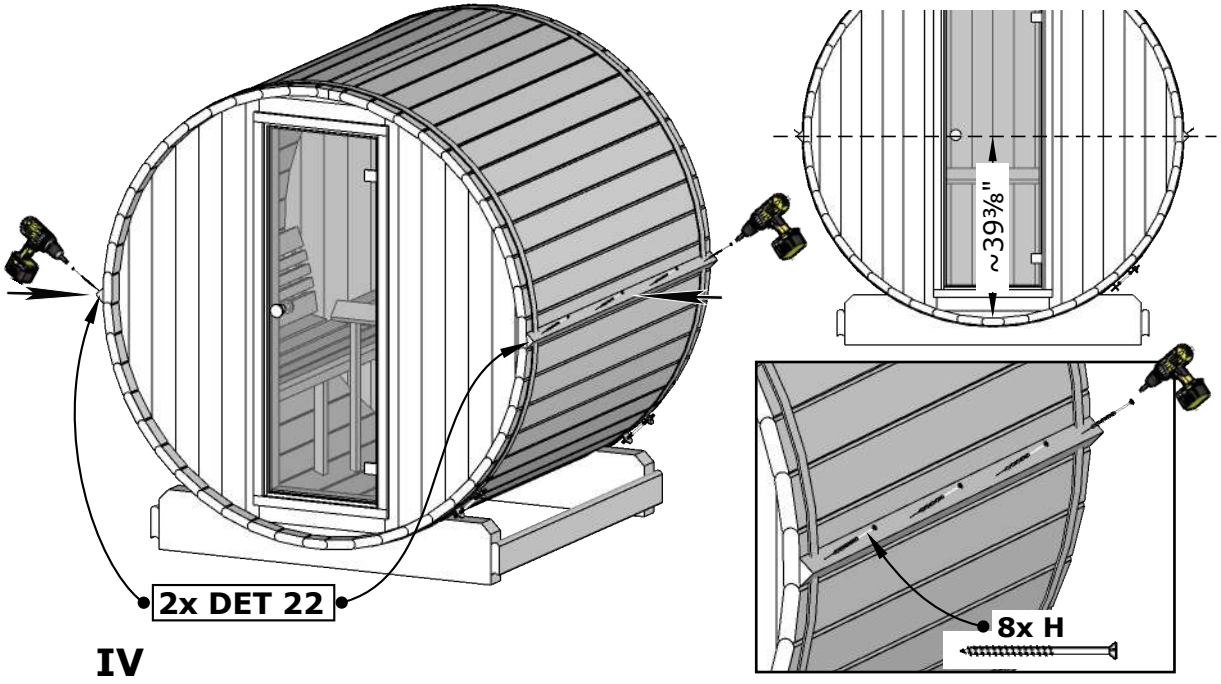

11.


E6 Barrel Sauna 59D" x 81H"

See the installation manual inside the shingles package

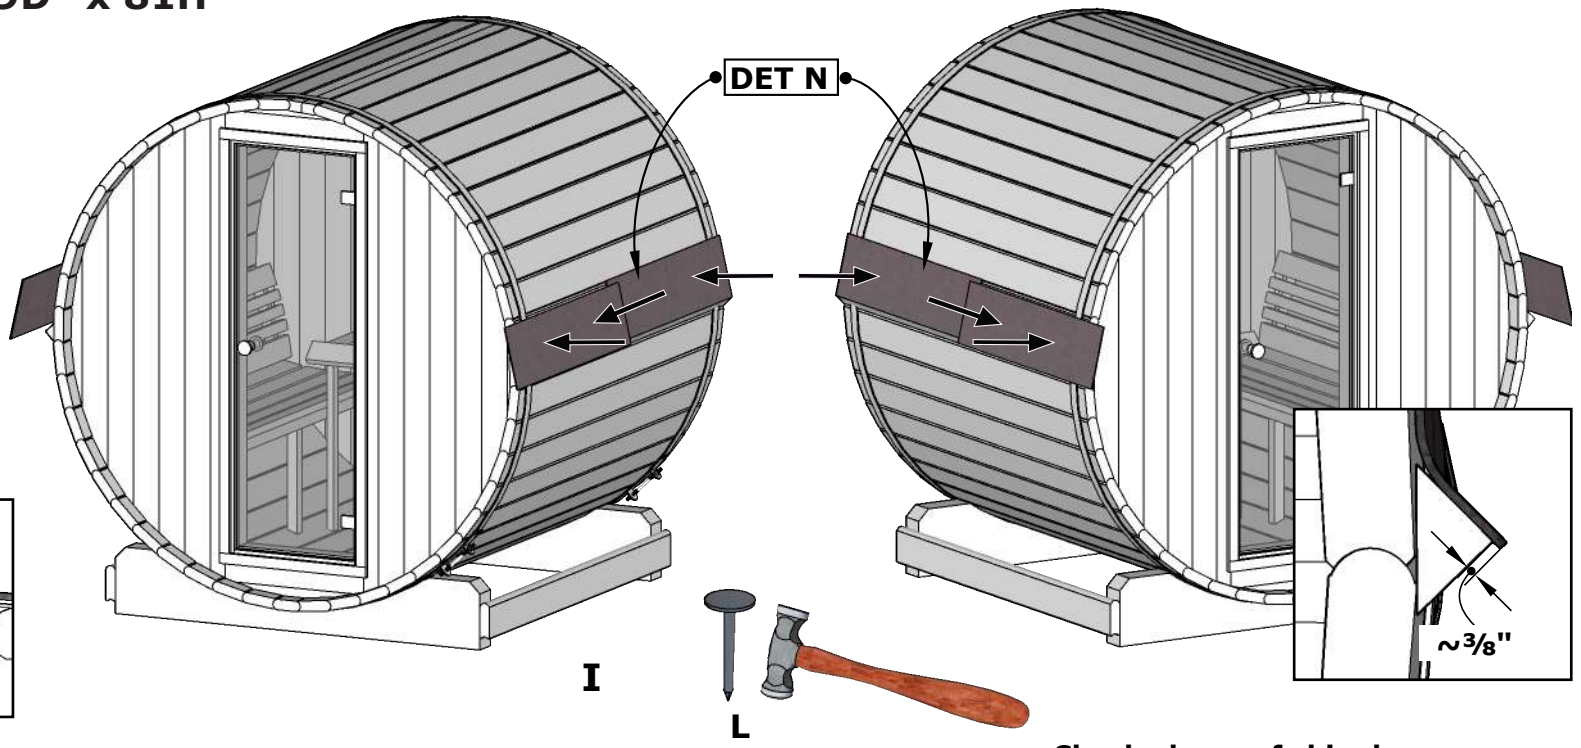


I


L

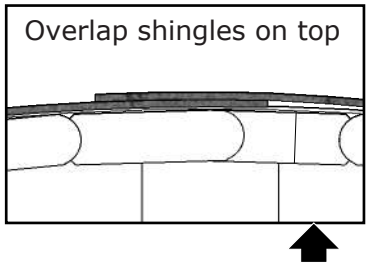

Check also roof shingles installation manual inside package.

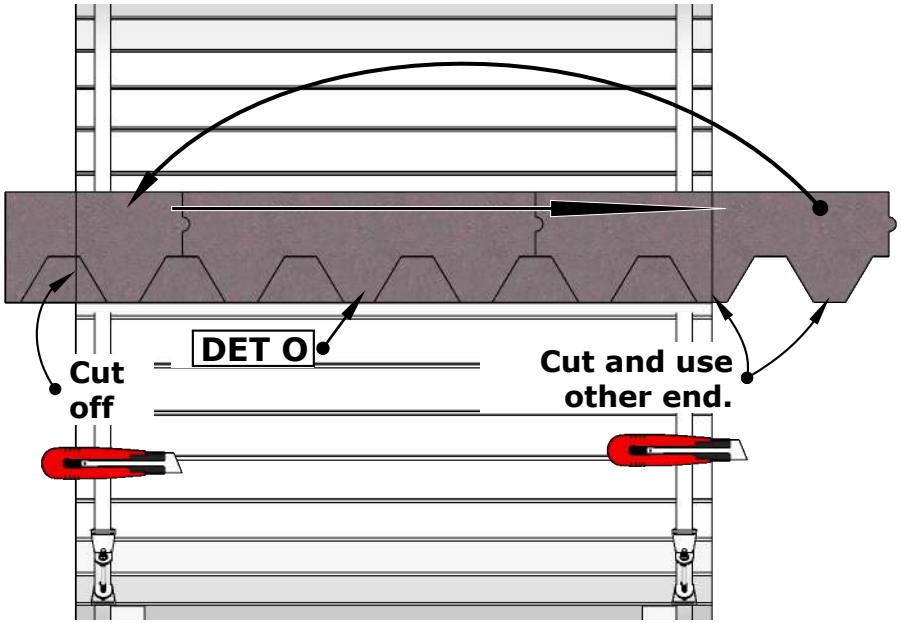


II

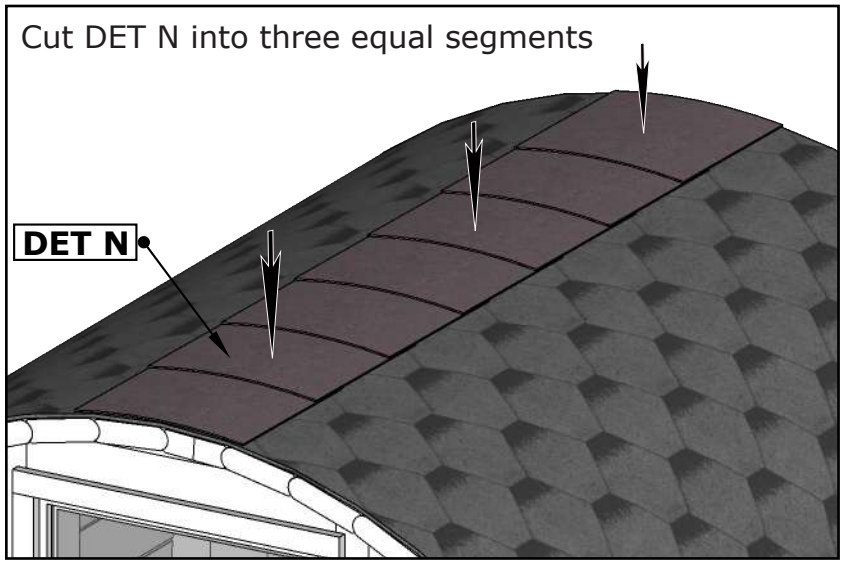



III

E6 Barrel Sauna 59D" x 81H"

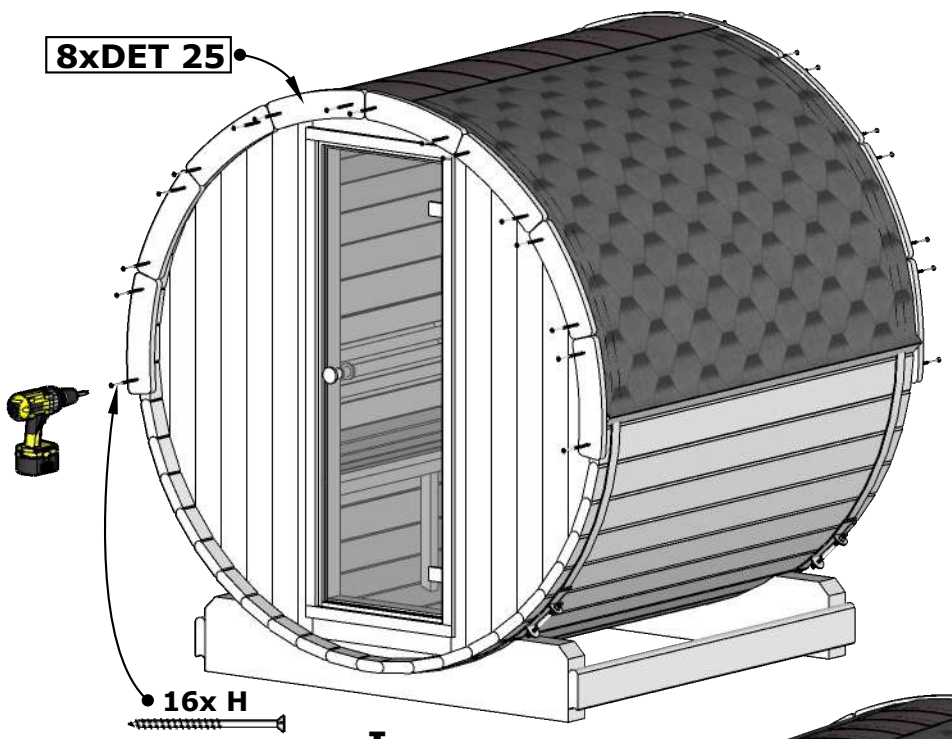

I

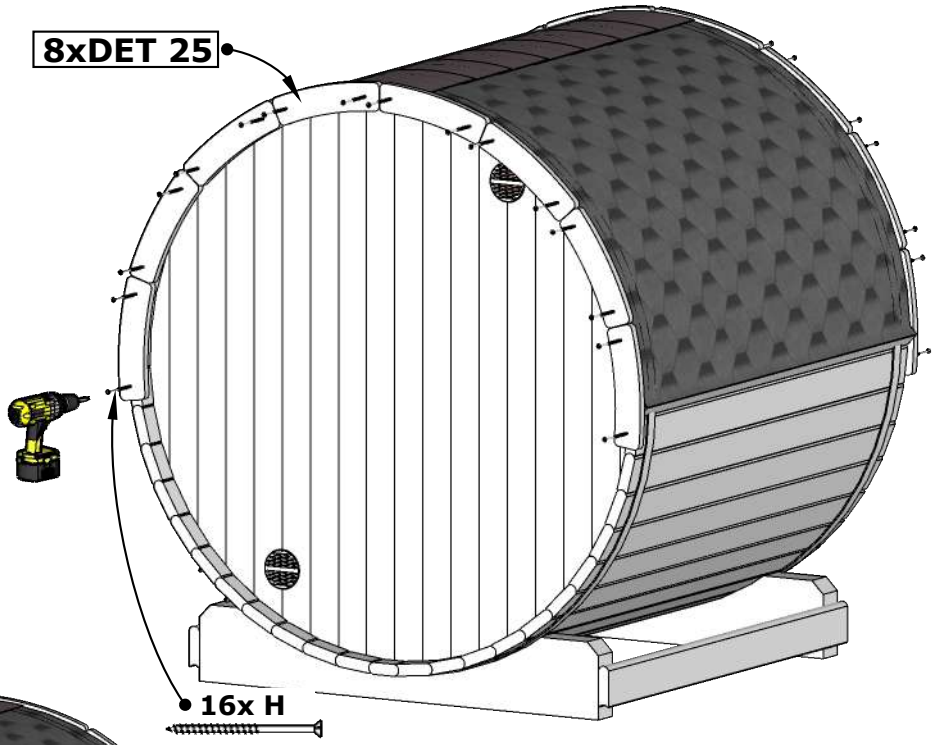

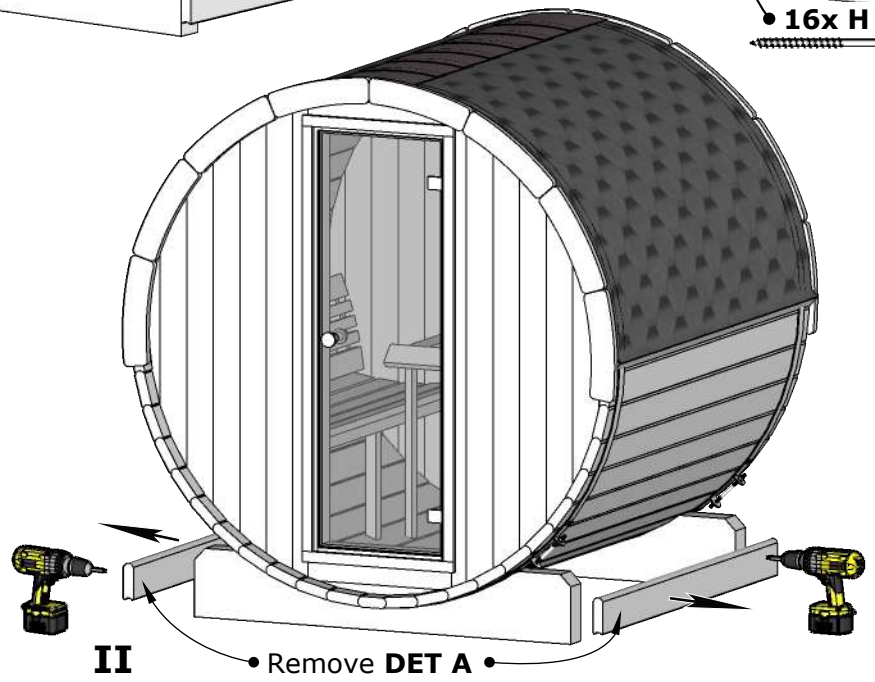

II